


**CHROME START BUTTON & SOLINOID KIT**

PART NUMBER

**#!%@\* &# INSTRUCTIONS**  
Mid Fifty F-100 Parts 1-800-252-1956

92907

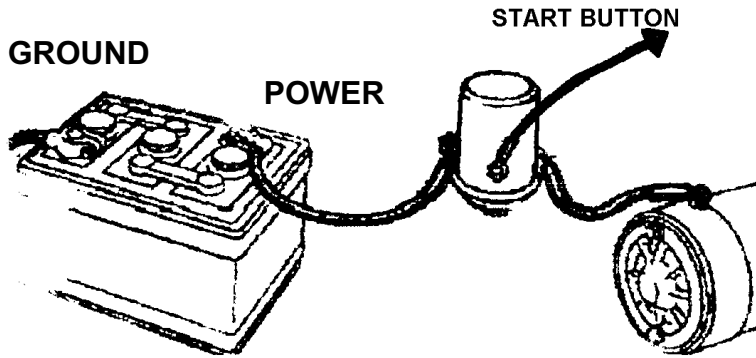

Chrome  
2907-PG

Starter button is Grounding button, which means power is to the single contact on the back and the button uses the dash as ground.



When button is pressed it completes circuit to solinoid which is also a grounding solinoid.  
Will work with positive ground or negitive ground.

**CHROME START BUTTON & SOLINOID KIT**

PART NUMBER

**#!%@\* &# INSTRUCTIONS**  
Mid Fifty F-100 Parts 1-800-252-1956

92907

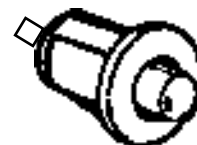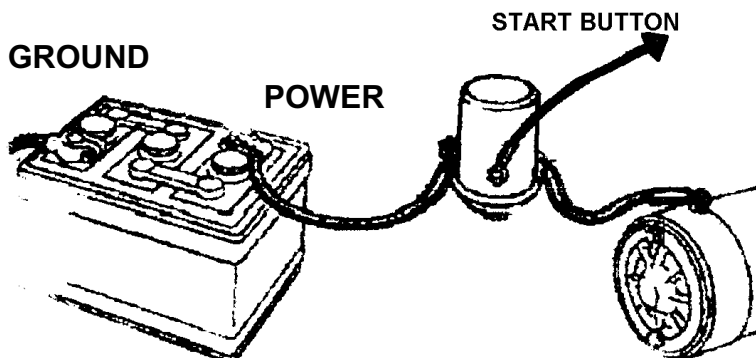

Chrome  
2907-PG

Starter button is Grounding button, which means power is to the single contact on the back and the button uses the dash as ground.

When button is pressed it completes circuit to solinoid which is also a grounding solinoid.  
Will work with positive ground or negitive ground.