



FOR INTERNAL INDICATOR LAMP:
Switch housing must be grounded by
contact with metal steering column

- | | | | | | | | | | |
|----------|---|----------|---|--------------------------|-------|---|----------|---|--|
| Brown | — | 1 | — | Right rear flasher lamp | Red | — | 5 | — | Stop switch |
| Green | — | 2 | — | Right front flasher lamp | Black | — | 6 | — | Flasher L terminal |
| Orange | — | 3 | — | Left rear flasher lamp | Blue | — | 7 | — | Flasher P terminal
(For indicator lamp inside switch) |
| ✓ Yellow | — | 4 | — | Left front flasher lamp | | | | — | ⏏ = Negative ground on car body |