

## 1953-55 WIPER MOTOR

INST-3000-5355  
3000-5355  
3004-5355  
3021-5355  
3037-5355

#@\$!\*#\$\$% INSTRUCTIONS  
MID FIFTYF-100 PARTS 1-800-252-1956

# Tips for installing 1953-55 Wiper Motor & linkage

The motor mounts under the dash with the largest corner of the triangle pointing down.

Always make sure that the arms coming off of the pivots are not angled above the pivot drums before starting the motor. This can cause the wipers to run in the wrong direction, or the linkage to hit itself.

When the motor starts it will be running clock wise. (This is if you are sitting inside the cab.)

\*\*Reversing the polarity of the motor will cause it to run *counter* clockwise. We DO NOT recommend customers use this method to reverse the direction of their wipers. See below for proper wiper reversal instructions.

When the motor and the linkage are installed and connected the clevis coming off of the motor should be pointing to the 9 O'clock position. (Again, this is if you are sitting inside the cab.)

When the wiper motor is in park the pivot arms need to be pointing down and toward the left of the cab.

\*\*If a you want to reverse the direction of your wipers, you simply need to change the clevis position to 3 O'clock (rather than 9 O'clock) and make sure that the pivot arms are pointing down and to the right (rather than the left) of the cab.