

Gas sender hardware

#@\$!*@#\$\$% INSTRUCTIONS
MID FIFTY F-100 PARTS 1-800-252-1956

INST-81601

PART NUMBERS

81601

PAGE NUMBER

1 OF 1

1...ring goes on center post, power to gauge

1...ring goes to ground screw with star washer

1...ring goes to body for ground

1...Female spade is used only if you have a spade ground terminal on the sender