

C 422

1957 Ignition Manual Transmission

- 1. "S" on Solenoid**
- 2. "C" on Solenoid**
- 3. "B" on Solenoid**
- 4. Temperature Sender**
- 5. Top of Ignition Resistor**
- 6. Bottom of Ignition Resistor**
- 7. Oil Sender**
- 8. "POS" coil terminal**
- 9. Ignition Harness to Chassis Harness**
- 10. Ignition Switch**
- 11. Oil Light**