


C 429

1956 Passenger Car under dash main harness

1. Heater fan motor
2. Clock motor
3. Clock light
4. Radio
5. Cigarette lighter
6. Glove box light
7. (Deluxe)heater control switch
8. Instrument lights
9. "Acc" on ignition switch
10. To stop light switch harness
11. "Battery" on ignition switch
12. "Ign 1" on ignition switch
13. Flasher
14. Gas gauge ignition
15. Turn signal RH
16. Gas gauge sender
17. High beam light
18. Turn signal LH
19. Temperature gauge sender
20. Generator light
21. Temp. gauge Ignition
22. Instrument on headlight switch
23. Ground on headlight switch
24. Stop on headlight switch
25. Headlamp on headlight switch
26. Battery on headlight switch
27. Parking lamp on headlight switch
28. Tail lamp on headlight switch
29. Turn signal harness connector
30. Horn button
31. "Heater" on fuse panel
32. "Radio" on fuse panel
33. Ignition on fuse panel
34. Battery on fuse panel
35. Rear body connector
36. Forward harness connector
37. High beam dimmer switch
38. Battery terminal dimmer switch
39. Low beam dimmer switch

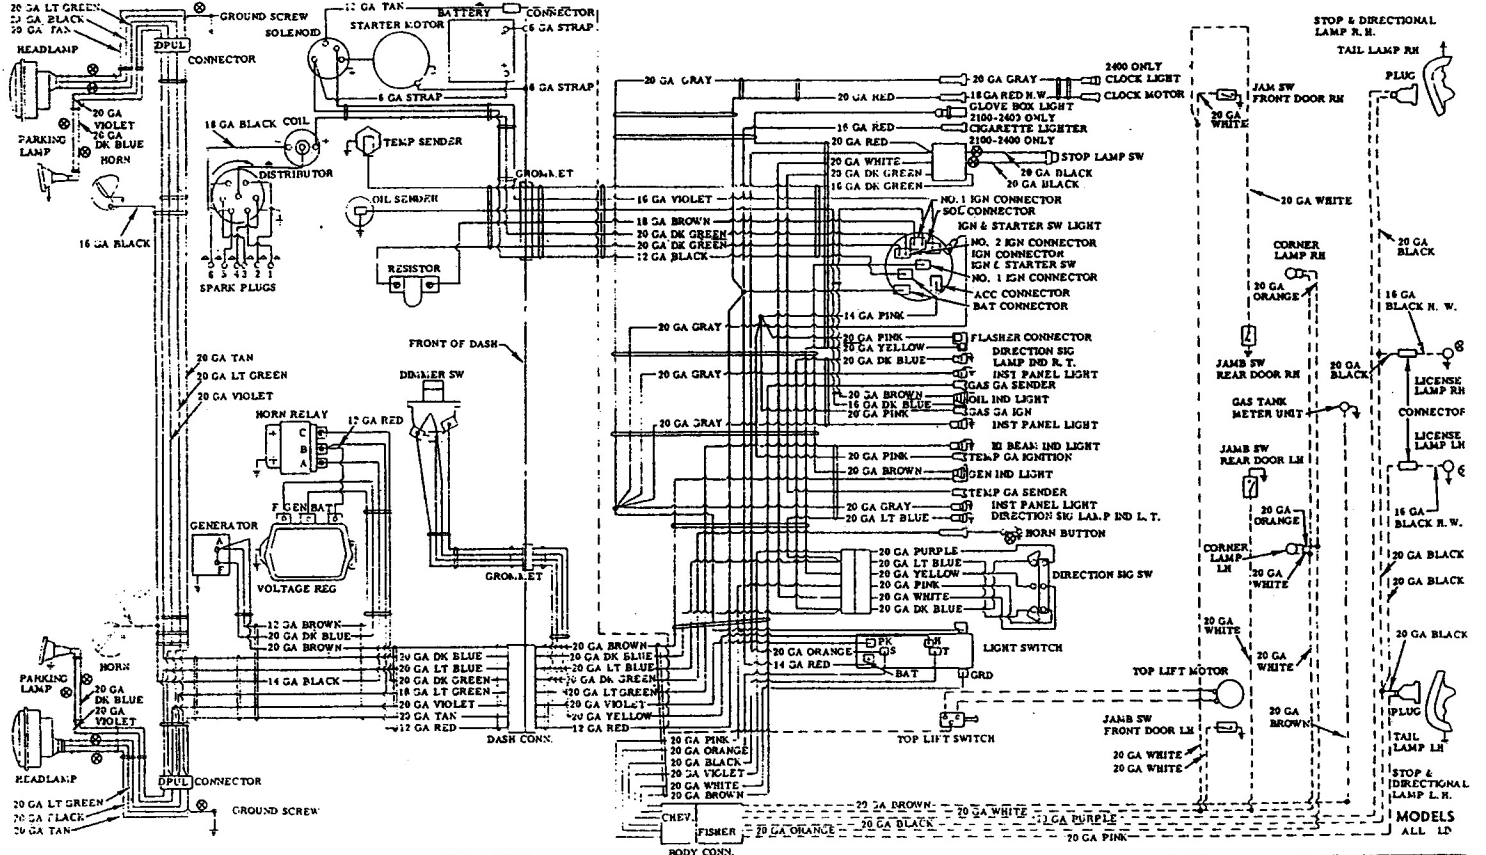

WIRING DIAGRAM

GENERAL NOTES  
 1. WIRES MARKED --- ARE FURNISHED WITH BODY  
 2. WIRES MARKED Δ ARE NOT PART OF A WIRING HARNESS ASSY.

NAME	PASSENGER CAR INSTRUCTION MANUAL			
REF.	DRAWN	CHECKED	SEC.	SHEET
				10
				1400