

1. Main Harness Connector
2. "S" on Starter Solenoid
3. "R" on Starter Solenoid
4. "POS" on coil
5. Temp. Sender
6. Oil Sender

