

1. Main Harness Connector
2. "S" on Starter Solenoid
3. "R" on Starter Solenoid
4. "B" on Starter Solenoid
5. "POS" on Coil
6. Temp. Sender

