

1961-63 with gauge, 8-cylinder starter to ammeter

1. Connect to "R" on the starter solenoid
2. Connect to "S" on the starter solenoid
3. Connect to "B" on the starter solenoid
4. Firewall connector
5. Coil positive side
6. Temperature sender
7. Oil pressure sender

