

4433 Engine Harness (1960-61) with V-8

Note: For use with generator warning light in dash only. Do not use with ammeter.

1. To 6-way firewall connector
2. To starter solenoid (R Terminal)
3. To starter solenoid (S Terminal)
4. To ignition coil (+ Terminal)
5. To water temp. sending unit
6. To oil pressure sending unit

