

1. Main Harness Connector
2. "S" on Starter Solenoid
3. "R" on Starter Solenoid
4. "B" on Starter Solenoid
5. Oil Sender
6. Temp. Sender
7. "POS" on Coil

