

# 6770

Ammeter to starter, 1964-66 with gauges

1. Connect to "R" on the starter solenoid
2. Connect to "S" on the starter solenoid
3. Connect to "B" on the starter solenoid
4. Firewall connector
5. Coil positive side
6. Temperature senders
7. Oil pressure sender (may not be used)

