

7031

Ammeter to starter, 1964-66 without gauges

1. Connect to "R" on the starter
2. Connect to "S" on the starter
4. Firewall connector
5. Coil
6. Temperature sender
7. Oil pressure sender

