

### CARPET KEEPERS

••••• POLISHED STAINLESS.....	2130.....	\$38.00 pr
<i>Very nice smooth bend, carpet grip edge and countersunk holes.</i>		
SCREWS, Polished .....	82130.....	\$5.00 kit
••••• BRUSHED STAINLESS .....	2130-BR .....	\$29.00 pr
SCREWS, Polished .....	82130.....	\$5.00 kit



### ROCKER COVER & CARPET KEEPER COMBO


*Mirror polished stainless, covers rocker panel and top edge with room for carpet, inside edge for grip & finish, countersunk screw holes.*  
Polished stainless.....2128.....\$68.50 pr

### CARPET KEEPER AND ROCKER COVER SCREW KIT

*Does both sides of all keepers or combos.*  
Polished stainless.....82130..... \$5.00 kit

### FLOOR SILL ROCKER COVERS

.....2129.....\$65.00 pr  
*Mirror polish stainless, nice tight fit over rocker panel, no screw holes. Use double sided tape or screws for installation, does not go over carpet*

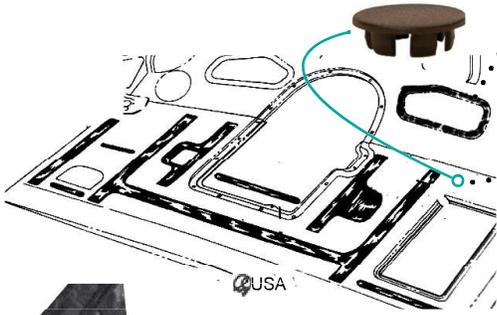

### FLOOR DEPRESSION FILLER & INSULATOR

*Pour formed for perfect fit. Self adhesive backing. No more old sticky, gummy, gook. Solid, smooth, high tech for a perfect level floor. Made these just because I hate the old sticky stuff and wanted to start with a nice even, flat, smooth, clean surface. Included in the complete floor kit below and the complete insulation kit, also see page 24*  
Set does 53-55 or 56 .....2100.....\$48.50 set

### FLOOR HOLE PLUGS

.....87722..... \$1.00 set



### FLOOR INSULATION KITS

*Kits include all pieces including above poured fillers, dampener kit for under seat and rear floor, high temp adhesive, tape & instructions.*  
1953-55 .....92170-5355 ..... \$149.00 kit  
1956.....92170-56 ..... \$149.00 kit

1. Start with sound dampener kit, self adhesive high density floor depression filler and sound dampener pads go in all indents on floor.
  2. Then add precut floor pieces made from aluminum faced heat and sound absorber-barrier material.
- Note you simply can NOT over-do the sound dampener, I like to go over the entire area, on top of the kits above with an additional smooth layer. Not necessary but really quiets and helps with cooling in our hot areas. Takes 2 extra rolls to completely "over-do" the cab also see page 25.



### SOUND DAMPENER

.....2166..... \$38.00 rl

### REAR WALL KIT

*Kits include all pieces shown, dampener (not shown) & instructions, does not include adhesive or tape.*  
1953-55 .....92173-5355 ..... \$79.00 kit  
1956.....92173-56 ..... \$79.00 kit

See page 24 for complete kits and additional insulation.



### STICK ON EMBLEMS *Great for rockers, 3M backing*

FORD SCRIPT .....	2220-A.....	\$8.00 ea
V8 .....	1205-M .....	\$6.99 ea
V6 .....	1205-M6 .....	\$9.50 ea