



REAR AXLE CONVERSIONS

Pg 183,
2012

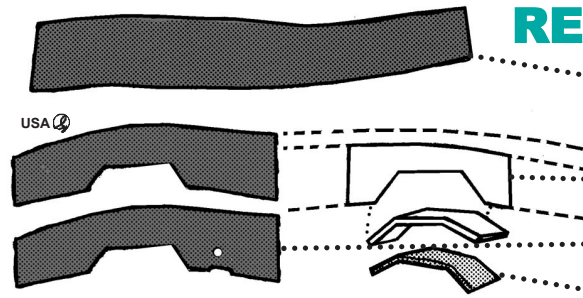


- FRAME BOXING PLATES**, No cutting Rear comes ready to weld in.
FRONT, from firewall to core support4496 \$59.50 pr.
- REAR**, kick section above axle, solid4495 \$40.00 pr.
- REAR**, with C-section removed4493 \$42.00 pr.
We have already cut out for "C" section, better, easier to work with,
- REAR** Pair, left side has brake hole and notch to clear the brake
hose bracket.4493-B \$45.00 pr.
- C-SECTION INSERT**4494 \$16.50 pr.

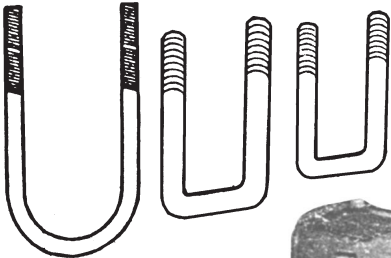


REAR U BOLTS, Order by size or application, We can make most any size U-bolt
Take into consideration Axle housing width, Stock is 2 1/2", Ford 9" is 3", etc.



- U-BOLTS** with high strength extra deep spring rated nuts.
Threaded extra long for use with Stock, Mono or Short Stack springs.
- FRONT SPRING2875 \$8.50 ea.
- REAR SPRING, STOCK AXLE2870 \$7.50 ea.
- REAR SPRING, 3" AXLE HOUSING2873 \$8.50 ea.

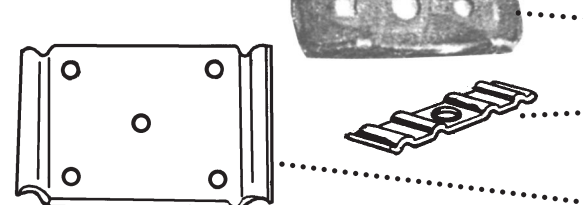



- SPRING SEAT PADS**, weld to axle. springs set on these
- STOCK REAR AXLE, 2 1/2"2883 \$10.00 ea.
- AXLE with 3" HOUSING2884-3 \$10.00 ea.
- SPRING U-BOLT TOP PLATE**, on top of springs, U-bolts go over these.
Stock springs, stock axle 2 1/2" housing or later model with 3" housing
.2809 \$10.00 ea.
- U-BOLT TIE PLATES** 3" Axle housing (9") . . .2885 \$10.00 ea.
Original axle has 2 1/2" Axle housing . . .2885-25 . . . \$12.00 ea.

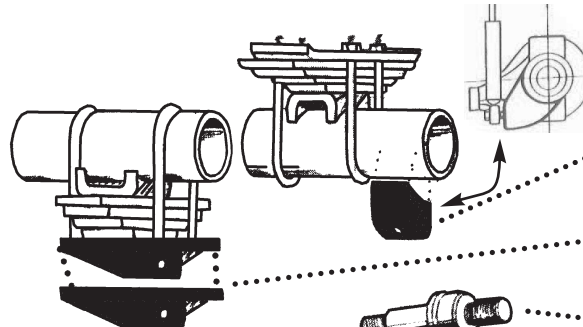

- AXLE CONVERSION SHOCK MOUNTS**
for 3" axle housings, listed are just the shock mounts separately
for complete kits shown see below
- AXLE BELOW SPRINGS**, (stock location) . . .2888 \$24.50 ea..
Welds to housing,
Use SHOCK STUD2403 \$9.00 ea..
- AXLE ABOVE SPRINGS**
Passenger2889-R \$24.50 ea..
Driver2889-L \$24.50 ea..
- SHOCK STUD**2403 \$8.00 ea..

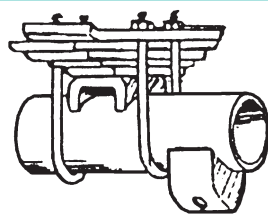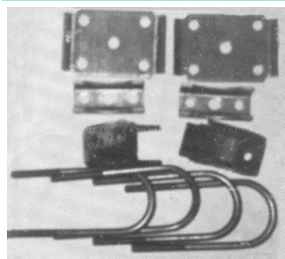

- REAR AXLE CONVERSION KIT, AXLE BELOW SPRINGS**,
Converting to popular Ford 9" or any axle with a 3" housing. Includes:
Seat Pads, Tie Plates, Shock Mounts and U bolts
Requires welding shock mount to axle2881 \$99.00 kit
Same Kit With SHOCK STUDS2881-WSS . . \$128.50 kit
- Stock position, Springs are on top of axle.

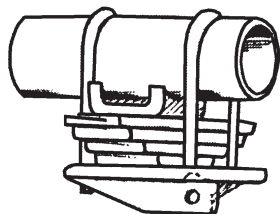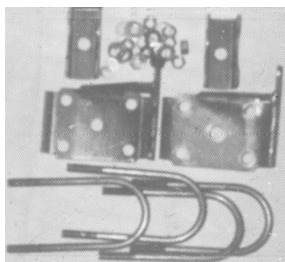

- REAR AXLE CONVERSION "FLIP" KIT, AXLE ABOVE SPRINGS**
Installs Axles with 3" housings, No welding required for shock mount
but Frame will need C sectioned. see top of page.
- Lowers truck 4 1/2 to 6 inches**2882 \$99.00 kit
Includes, Seat Pads, Tie Plates With Shock Brackets and U Bolts.
- Kit for 2.5" AXLE2882-25 \$99.00 kit
- With SHOCK STUDS2882-WSS . . \$109.00 kit
- With Frame boxing plates & C section
Need it all kit92882 \$168.50 kit

Use stock eye springs if axle is on top, or axle will hit frame, even with "C" sections installed.