

CARPET KEEPERS,
 POLISHED STAINLESS2130 \$34.00 pr.
 Very nice smooth bend, carpet grip edge and countersunk holes.

BILLET ALUMINUM CARPET KEEPERS . .2130-AL \$99.95 pr


ROCKER COVER & CARPET KEEPER COMBO
 POLISHED STAINLESS2128 \$68.50 pr.
 Mirror polished Stainless, covers rocker panel and top edge with room for carpet, inside edge for grip & finish, countersunk screw holes.

KEEPERS SCREW KIT, does both sides of all Keepers or Combos.
 POLISHED STAINLESS82130 \$5.00 kit


FLOOR SILL ROCKER COVERS2129 \$60.00 pr.
 Mirror Polish Stainless, nice tight fit over rocker panel, no screw holes.
 Use double sided tape or screws for installation, does not go over carpet

STICK ON FORD EMBLEM, great for rockers, 3M backing
 Ford Script2220-A \$8.00 ea.
 Ford Oval2220-B \$19.00 ea.


STICK ON MINI V8 And V6
 V8, copy of 1955 & 56 Grille emblem . . .1205-M \$7.50 ea.
 V6, Just in case you've put in a V61205-M6 \$7.50 ea.

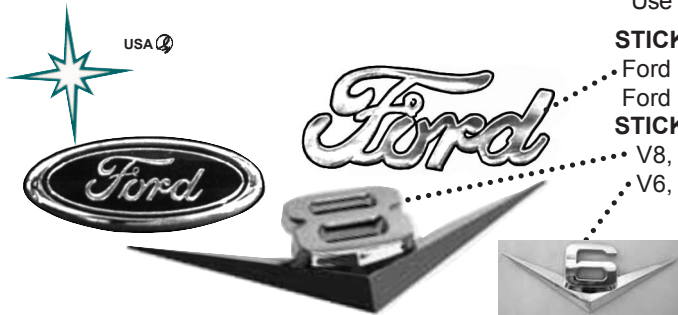

FLOOR REPAIR PANELSPage 171
FLOOR MATPage 23
COMPLETE INTERIOR KITSPage 26
MORE INSULATIONPage 21
BRAKE ARM, COLUMN TRIMSPg 117, 176

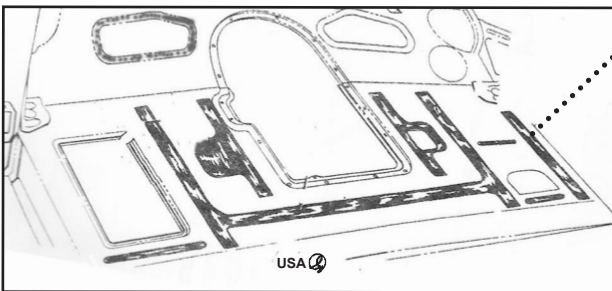


FLOOR DEPRESSION FILLER & INSULATOR
 Pour formed for perfect fit. Self adhesive backing. No more old sticky, gummy, gook. Solid, smooth, high tech for a perfect level floor. Made these just because I hate the old sticky stuff and wanted to start with a nice even, flat, smooth, clean surface.
 Set does 53-55 or 562100 \$48.50 set
 This kit is included in the complete floor kit below and the complete insulation kit, also see page 26

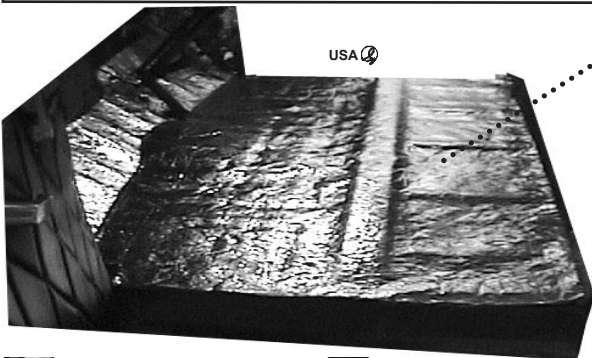

FLOOR INSULATION KITS:
 1953-5592170-5355 \$139.00 kit
 195692170-56 \$139.00 kit
 Kits include all pieces including above poured fillers, dampener kit for under seat and rear floor, high temp adhesive, tape & instructions

- 1..Start with sound damper kit, self adhesive high density floor depression filler and sound dampener pads go in all indents on floor.
- 2..Then add precut floor pieces made from Aluminum faced heat and sound absorber-barrier material.

Note you simply can NOT over-do the sound dampener, I like to go over the entire area, on top of the kits above with an additional smooth layer. Not necessary but really quiets and helps with cooling in our hot areas. Takes 2 extra rolls to completely "over-do" the cab
 Sound dampener, see also pg. 27 .2166 \$38.00 roll

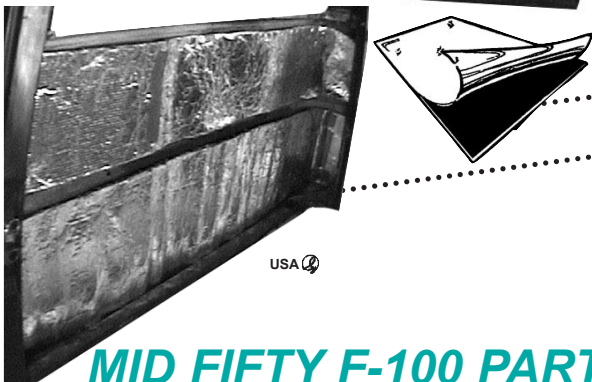

REAR WALL KIT
 1953-5592173-5355 \$79.00 kit
 195692173-56 \$79.00 kit
 kits include all pieces shown, dampener (not shown) & instructions this kit does not include adhesive or tape.

SEE PAGE 26 For complete kits and additional insulation.