


1956 SOLID SIDE WINDOW CONVERSION

**glass kits have oversize shipping charge, additional 15.00


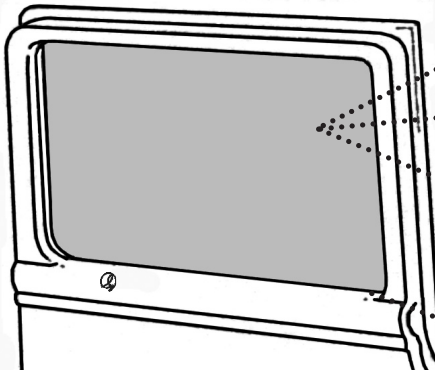


SOLID SIDE WINDOW KITS
Now available with Black channels
(no Stainless Bead, Glue-in felts)

GLASS COLOR CHOICES

Clear, Tinted, Smoke, Double Dark(Limo) or Blue
Blue glass \$10.00 additional

SALE ON LIMO DOUBLE DARK GLASS
\$25.00 OFF KIT

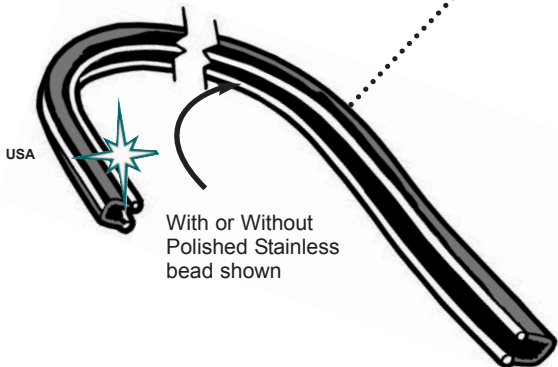

1956 SOLID SIDE WINDOW KIT Kit includes everything for both doors, Tempered glass in choice of Clear, Double Dark, Tinted, Smoke or Blue. One piece channels, front run channel brackets, bracket kit, lower felt wipes, hardware, glass tape and instructions.

1956 SOLID SIDE KIT FOR STOCK WINDOW REGULATORS
Includes Lower Lift Channels for stock regulators. (Blue add \$10.00)
Order your choice of colors, Clear, Tinted, Smoke, Blue or Double Dark
POLISHED STAINLESS BEAD91726-WC\$325.00 kit
BLACK, NO BEAD91727-WC\$325.00 kit

1956 SOLID SIDE KIT FOR USE WITH POWER WINDOW KITS
No lift channels, ALL power window kits come with lift channels.
Order your choice of colors, Clear, Tinted, Smoke, Double Dark, Blue
POLISHED STAINLESS BEAD91726-NO\$290.00 kit
BLACK, NO BEAD91727-NO\$290.00 kit

1956 NO GLASS KIT Includes: lower felts, felt channels, brackets, and instructions. Everything but the glass.
POLISHED STAINLESS BEAD91728-56NG ..\$210.00 kit
BLACK, NO BEAD91729-56NG ..\$210.00 kit
*Order Extended lower lift runners if not using a power window kit.
Laminated glass may break without them, our glass is tempered.*

1956 SOLID SIDE WINDOW KIT INDIVIDUAL PIECES

SOLID SIDE GLASS ONLY,1729-56\$70.00 ea.
Clear, Tint, Smoke, Double Dark or *Blue (blue is additional \$5.00)


LOCK SIDE UPPER & BACK CHANNEL BRACKET Holds window channel.
Driver side, fits 1953-563114-L\$40.00 ea.
Passenger, fits 1953-563114-R\$40.00 ea.

LOWER FELT WIPES, formed and clips installed as shown
FORMED, Stainless bead 1 door1727-56\$50.00 pr.
FORMED, Black Bead, one door1727-56B\$50.00 pr.
Do-Yourself, Black Bead, glue in1727-BK\$17.50 pr.
Do-Yourself, Stainless Bead, glue in1727-ST\$17.50 pr.

1956 EXTENDED LOWER LIFT RUNNER
Use these if using stock window regulators, or if not using our Tempered glass, Laminated glass may break without this support.
1956 Order LEFT or Right1731-EX\$39.00 ea

GLASS SEAT TAPE KIT for setting glass into lower lift.
SEAT TAPE FOR BOTH SIDES81620\$5.00 pr.

GLASS FELT CHANNEL WITH STAINLESS BEAD 96" LONG, goes across top and down both front and rear of glass to bottom of door.
Shape to fit any door, chop tops, etc.3107-UN\$38.50 ea
BLACK, NO STAINLESS BEAD3108-B\$38.50 ea.
Additional oversize shipping on channels\$15.00 pr.



1956 solid side glass has a right and left, it looks like the same but curve is slightly different, determine correct side before setting in lift channels,
Upper and Back Window channels take a little coaxing into shape. If you are doing solid side windows the channels need to make a complete upside down U shape going all the way up, over and down both sides of glass.
If you rush this process the stainless bead will crimp and separate from felt material.
The channel must go all the way to bottom of both front and rear channel holders, inside door as the glass rides inside them when rolled down. Don't try messing with original style clips, glue channels in at original clip points with weatherstrip glue.
lubricate felts with dry graphite. see page 92, 98
Some 1953-55 glass passes too far up into the outer corner, best solution for this is to split back of felt channel for about 5 inches in the corner, letting glass pass through slit when rolled all the way up.
SEE FELT BENDING INSTRUCTIONS PG. 91

Additional shipping charges on all glass or kits with glass....\$15.00

MID FIFTY F-100 PARTS
1-800-252-1956