


HEADLINERS

To cover the headliner with material you would need 3 Yards
Panel truck headliner, see page 168

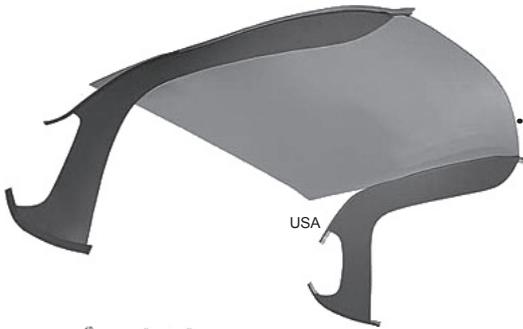

STOCK PANEL-BOARD HEADLINER

Stock headliners are made of stiff panel board, and can be VERY difficult. You are working upside down & backwards, and making a straight piece into a curve so please see our ABS headliners. Oversize shipping

| | | |
|-----------------------------------|-----------------|-------------|
| 1953-55 | 2109-5355 | \$120.00 ea |
| 1956 standard rear window | 2109-56 | \$120.00 ea |
| 1956 wraparound rear window | 2109-BB | \$120.00 ea |



HEADLINER TRIM SCREW SET82110.....\$1.00 set



HEADLINER RETAINER CLIP


| | | |
|--------------------------|----------------|-------------|
| Each | 2113-EA..... | \$0.90 ea |
| Complete set of 16 | 2113-SET | \$10.00 set |



HEADLINER RUBBER RETAINER2112.....\$16.50 ea

Replace this, the newer & softer the easier it is to get the headliner in. We make 196" long to go all the way to floor for a cleaner look, originally, and others on the market are only 178" and did not go to floor but should have. Trim excess, use this with flat "old style" ABS headliners and stock panel-board headliners. If covering headliner, do not overlap material to back side of panel as it will be too thick to go inside rubber, just bring material to edge and trim.

NOTE: molded abs styles do not use retainers and are easiest to install. See next page

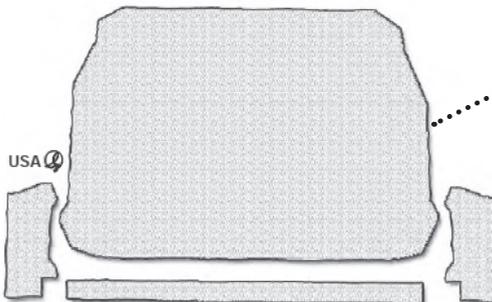

HEADLINER INSULATION KIT

Includes pre-cut sound dampeners, roof insulation and side of window insulation, high temp adhesive, aluminum tape & Instructions

| | | |
|-----------------------------------|------------------|-------------|
| 1953-55 standard window | 92176-5355 | \$89.00 kit |
| 1956 standard window | 92176-56 | \$89.00 kit |
| 1956 big wrap around window | 92177-56BB | \$89.00 kit |
| Overdone dampener kit 53-55..... | 92166-5355 | \$66.00 ea |
| Overdone dampener kit 1956..... | 92166-56 | \$66.00 ea |

See next page for more info



USA

DIE CUT FORD LOGO

Just peel & stick to any surface, glue and smooth fabric over shape and ta-da, custom!!

| | | |
|-------------------------------|---------------|------------|
| Inny and outie | 2119-FD..... | \$14.95 ea |
| SALE buy 2 save \$10.00 | 2119-FD2..... | \$19.95 pr |
| V8 | 2119-V8 | \$14.95 ea |



HI-TEMP SPRAY ADHESIVE2103.....\$14.95 ea

Use on firewall, roof, floor, any place temps will get high



UPHOLSTERY ADHESIVE2102.....\$13.95 ea

OVERHEAD RADIO SPEAKER

| | | |
|---------------------------------|-----------------|------------|
| Speaker | 0185 | \$28.50 ea |
| Speaker grille, 1956..... | 0179-56 | \$88.00 ea |
| Speaker grille, 53-55 | 0179-5355 | \$88.00 ea |
| Grille screen and pattern | 0184-56 | \$8.00 ea |
| Speaker to cover bolts..... | 80177 | \$3.90 set |
| Speaker to cover wing nuts..... | 80178 | \$3.50 set |
| Grille to headliner bolts..... | 80176 | \$2.90 set |



USA

