


BED BOLTS • BED MOUNTING

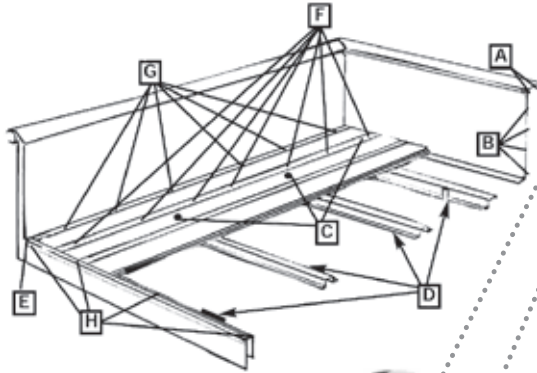

UNDER WOOD WASHER KIT

- Large washers that span gap and catch wood on both sides of strip bolts.
 Zinc..... 80215-Z..... \$4.50 set
 Stainless..... 80215-SS..... \$6.50 set

A.) FRONT BED PANEL TOP ANGLE BOLTS

- Zinc..... 80202-Z..... \$2.00 set
 Polished stainless hex..... 80202-PX..... \$7.90 set
 Polished stainless button..... 80202-PB..... \$8.90 set

B.) BED SIDES TO FRONT BOLTS

- Use instead of welding, we include acorn nuts to cover the threads
 Polished hex & acorns..... 80205-PX..... \$15.00 set
 Polished button & acorns..... 80205-PB..... \$16.00 set

C.) HOLD DOWN BOLT KIT

- Replacements, 4 phillips flat head, 4 countersunk washers & 2 carriage
 (see also individual bolts)
 Zinc..... 80210-Z..... \$12.50 kit
 Stainless..... 80210-SS..... \$22.00 kit
 Polished stainless..... 80210-PS..... \$29.00 kit

D.) HIDDEN MOUNTING BOLT KIT

- Grade 8 and corrosion resistant, included with hidden cross-members
 80230..... \$8.00 kit

E.) BED SIDE END BOLT

- Where bed side, rear x-member and end cap come together (included in H)
 80203-PS..... \$3.90 set

F.) BED STRIP ONLY BOLT KIT

- 49 Bolts & hardware, this is kit most offer, it only does strips so leaves bedside flange without bolts. Bolts should match so see kit below.
 Polished stainless..... 80208-PS..... \$78.00 kit

G.) BED SIDE FLANGE TO FLOOR BOLTS

- These are also included in our bed strip bolt kit (80209) below
 Polished..... 80207-PS..... \$25.00 set

F.-G.) SKID STRIP BOLT KIT

- All 67 bolts with locks & nuts. Not just half a set, does strips, rear sill & sides to wood. Use button head only with unpunched strips
 Zinc carriage head..... 80209-Z..... \$30.50 kit
 Stainless carriage..... 80209-SS..... \$72.50 kit
 Show polish carriage..... 80209-SHW..... \$128.50 kit
 Polished stainless..... 80209-PS..... \$98.00 kit
 Polished button..... 80209-PB..... \$99.50 kit

H.) END CAP BOLTS Polished (includes E)..... 80204-PS..... \$6.90 set

INDIVIDUAL HOLD DOWN BOLTS & WASHERS

- Flat head bolt, square drive as original..... 0212-Z..... \$3.25 ea
 Copy of original, come in plain zinc plate only, replacements above (80210) look better and are available in stainless & polished.
 Countersunk washer, same as included in our hold down kits
 Zinc..... 0213-Z..... \$1.50 ea
 Stainless..... 0213-SS..... \$2.50 ea
 Polished stainless..... 0213-PS..... \$3.50 ea
 Dome head bolt, zinc..... 0211-ZSM..... \$6.00 ea
 Original, but ours fit correctly, all others on market are too large.

FRONT X-MEMBER TO STRIP SPACER..... 0214-SP..... \$5.00 pr

Goes between strip and crossmember to help keep strip from dimpling.

BED TO FRAME INSULATORS..... 0214..... \$8.00 set

8 pieces, go between frame & cross-members, thin in front and back between bracket and frame, thick at each center crossmember to frame.

FRONT X MEMBER BED MOUNTING BRACKET

- Is attached to frame..... 0234..... \$20.00 ea
 Bracket to frame bolts, does both..... 80234..... \$3.50 set

BED SIDES TO WOOD INSULATORS..... 0216..... \$15.00 pr

