

CARPET KEEPERS • INSULATION



CARPET KEEPERS


Polished stainless.....	2130.....	\$34.00 pr
<i>Very nice smooth bend, carpet grip edge and countersunk holes.</i>		
Brushed stainless.....	2130-BR.....	\$29.00 pr
Billet aluminum.....	2130-AL.....	CALL



ROCKER COVER & CARPET KEEPER COMBO

Mirror polished stainless, covers rocker panel and top edge with room for carpet, inside edge for grip & finish, countersunk screw holes.

Polished stainless.....	2128.....	\$68.50 pr
-------------------------	-----------	------------

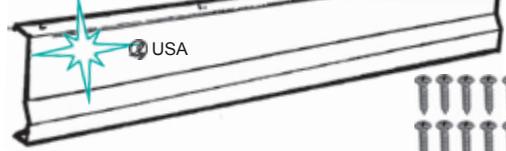

CARPET KEEPERS SCREW KIT

Does both sides of all keepers or combos. Mirror polish stainless, nice tight fit over rocker panel, no screw holes. Use double sided tape or screws for installation, does not go over carpet

Polished stainless.....	82130.....	\$5.00 kit
-------------------------	------------	------------



FLOOR SILL ROCKER COVERS.....	2129.....	\$60.00 pr
-------------------------------	-----------	------------



STICK ON EMBLEMS

Great for rockers, 3M backing

Ford script.....	2220-A.....	\$8.00 ea
V8.....	1205-M.....	\$5.00 ea
V6.....	1205-M6.....	\$9.50 ea



FLOOR DEPRESSION FILLER & INSULATOR

Pour formed for perfect fit. Self adhesive backing. No more old sticky, gummy, gook. Solid, smooth, high tech for a perfect level floor. Made these just because I hate the old sticky stuff and wanted to start with a nice even, flat, smooth, clean surface. Included in the complete floor kit below and the complete insulation kit, also see page 24

Set does 53-55 or 56.....	2100.....	\$48.50 set
---------------------------	-----------	-------------



FLOOR INSULATION KITS

Kits include all pieces including above poured fillers, dampener kit for under seat and rear floor, high temp adhesive, tape & instructions.

1953-55.....	92170-5355.....	\$139.00 kit
1956.....	92170-56.....	\$139.00 kit



1. Start with sound dampener kit, self adhesive high density floor depression filler and sound dampener pads go in all indents on floor.
2. Then add precut floor pieces made from aluminum faced heat and sound absorber-barrier material.

Note you simply can NOT over-do the sound dampener, I like to go over the entire area, on top of the kits above with an additional smooth layer. Not necessary but really quiets and helps with cooling in our hot areas. Takes 2 extra rolls to completely "over-do" the cab also see page 25



SOUND DAMPENER.....	2166.....	\$38.00 rl
---------------------	-----------	------------

REAR WALL KIT

Kits include all pieces shown, dampener (not shown) & instructions, does not include adhesive or tape.

1953-55.....	92173-5355.....	\$79.00 kit
1956.....	92173-56.....	\$79.00 kit

See page 24 for complete kits and additional insulation.

