

ABS INTERIOR


These are one of the best things to come along for our trucks. Makes doing your own interior a pleasure. Professional looking results at a fraction of the cost and the truck stays home. ABS is surprisingly easy to cover, just spray glue your choice of fabric, and we are happy to send you free samples of fabrics and colors we stock or if you find something you like locally see previous page for yardage requirements for each piece. **DON'T FORGET INSULATION** see page 24

All ABS parts made in the USA




USA

USA

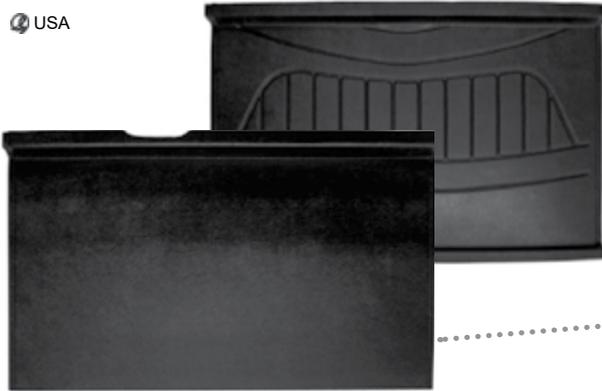

USA

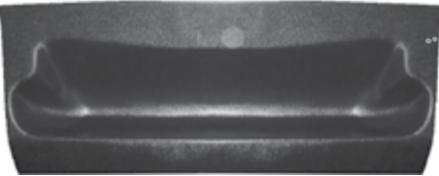

USA

COMPLETE ABS INTERIOR KIT

Includes choice of embossed or smooth ,door panels with armrests, kick panels, rear wall and headliner. (Headliners are smooth in all kits) Oversize shipping Kits with insulation include floor fillers, precut insulation, glue, tape & seam roller.

NO INSULATION

| | | |
|----------------------------------|------------------|----------|
| 53-55 embossed | 92143-5355 | \$795.00 |
| 53-55 embossed, no arm rests ... | 92144-5355 | \$795.00 |
| 53-55 smooth..... | 92142-5355 | \$795.00 |
| 1956 embossed * | 92143-56 | \$795.00 |
| 1956 embossed, no arm rests * .. | 92144-56 | \$795.00 |
| 1956 Smooth* | 92142-56 | \$795.00 |
| 56 big window, embossed* | 92143-56BB | \$795.00 |
| 56 big window, smooth* | 92142-56BB | \$795.00 |

WITH PRE-CUT INSULATION

| | | |
|--------------------------------|------------------|------------|
| 53-55 embossed | 92146-5355 | \$1,149.00 |
| 53-55 smooth..... | 92145-5355 | \$1,149.00 |
| 1956 embossed* | 92146-56 | \$1,149.00 |
| 1956 Smooth* | 92145-56 | \$1,149.00 |
| 56 big window, embossed* | 92146-56BB | \$1,149.00 |
| 56 big window, smooth* | 92145-56BB | \$1,149.00 |

**Let us know if you prefer door panels without armrests
*Kit wall comes with no tank style. Let us know if you have a in-cab tank

ABS REAR WALL

Sides are contoured to fit. Also see flat style rear wall covers on page 14.

| | | |
|------------------------------------|----------------|--------------|
| Embossed | | |
| 1953-55 & 56 without gas tank.... | 2146-E..... | \$259.00 set |
| 1956 with big back glass | 2146-BBE..... | \$259.00 set |
| Smooth | | |
| 1953-55 & 56 without gas tank, ... | 2145-SM | \$259.00 set |
| 1956, Smooth, big back glass ... | 2145-BBSM..... | \$259.00 set |
| 1956 tank rear wall cover | 2139-TNK..... | \$259.00 set |

Fits 1956 with in cab tank, trim to fit big window cab.

ABS HEADLINERS

Doesn't use rubber retainer. Installs in an hour, honest ! **BEST BUY!!** Smooth only. High shipping cost. Also see page 22 for more headliner options

| | | |
|-----------------------------------|----------------|--------------|
| 1953-55 smooth..... | 2148-5355SM.. | \$249.00 set |
| 1956 smooth..... | 2148-56SM..... | \$249.00 set |
| 1956 big back window, smooth..... | 2148-BBSM..... | \$249.00 set |

DYI ABS FLAT SHEET KIT, 48 x 68 inches. can be rolled for shipping. Comes with 30 Dua-loc tabs and weatherstripping.

| | | |
|---------------------------------|----------------|-------------|
| Kit | 2143-46 | \$100.00 ea |
| Extra ABS sheets 48 x 68" | 2143-461 | \$90.00 ea. |

