



# 1948-52 Ford Pickup Headliner Installation

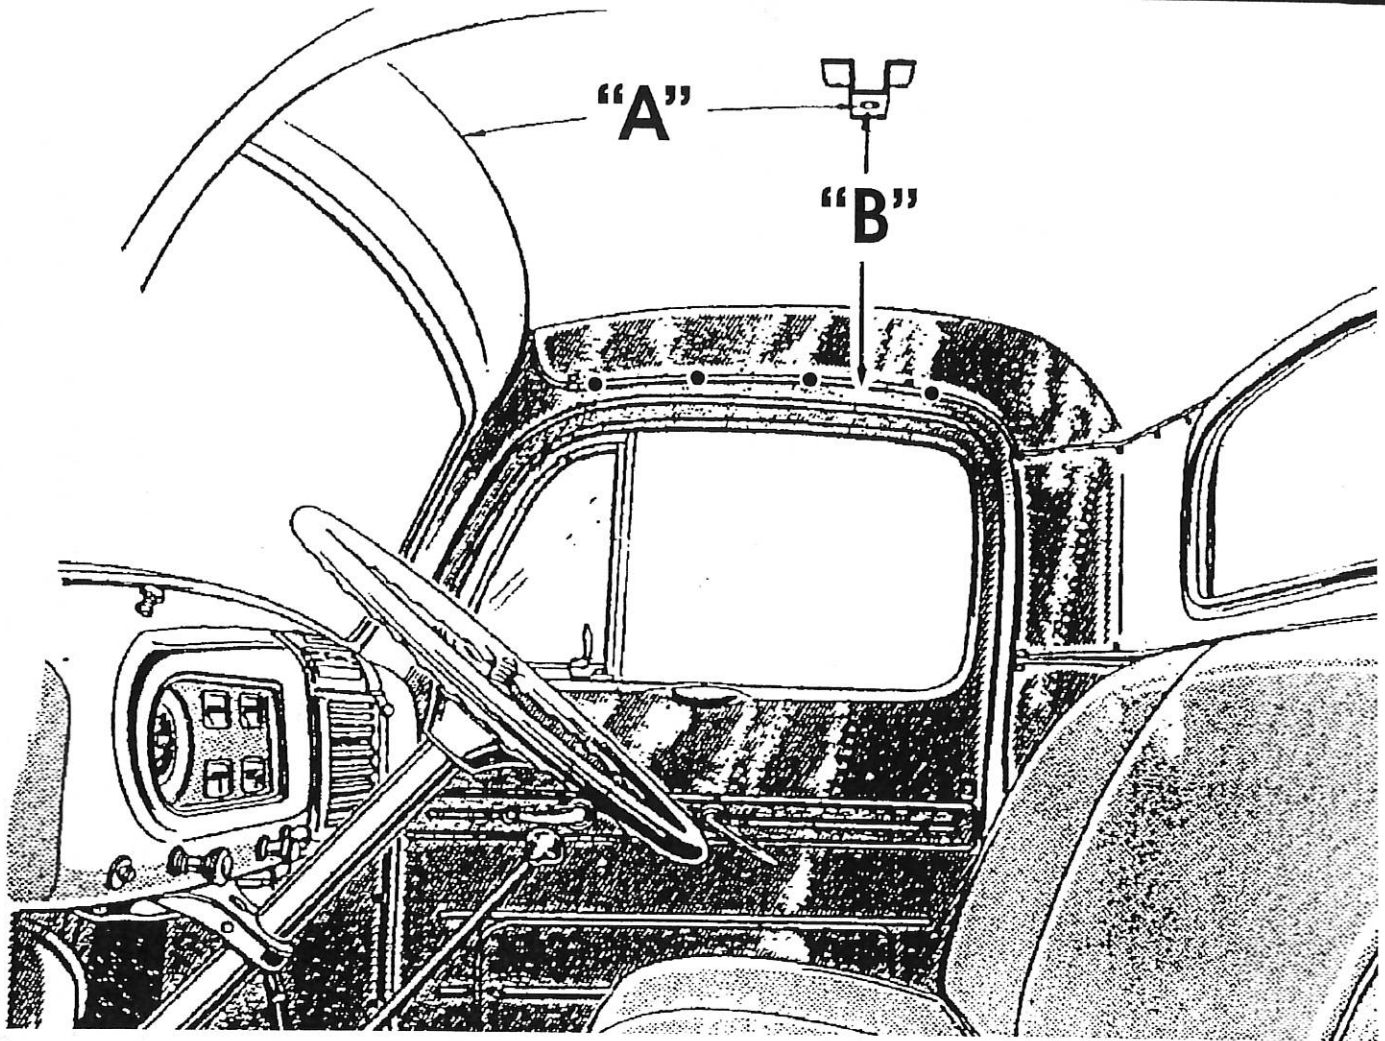

**1.** Locate the bracket in the center of the inner roof panel and measure the length of both "A" and "B" shown in the drawing above. Distance "A" is from the header panel to the center of the hole in the bracket. Distance "B" is from the side panel above the door to the center of the hole in the bracket. The purpose of these measurements is to locate the bracket hole after the headliner is in place.

**2.** Two people are required to place the headliner in position, one on each side. Start at the front with the headliner going between the header panel and the roof panel. Working from front to back, position the sides of the headliner over the doors and towards the back. At the back, the headliner will be tucked behind the rubber seal on top of the back window.

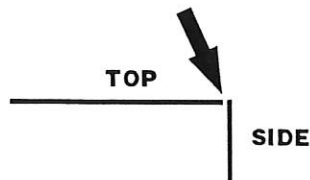

**3.** The sides of the headliner starting from the front will be positioned to the outside of the top of headliner. Above each door the side of the headliner has 4 holes. If the holes in the headliner do not match those in the side panel, new holes can be drilled in the side panels.

**4.** The lower back trim goes behind the gas tank which will have to be loosened or removed to get the trim panels in position.

**5.** The trim panels that go on each side of the back window can now put into place and secured with trim screws.



4140 Concord Parkway So., Concord, NC 28027  
(704) 786-8139 email: [info@dennis-carpenter.com](mailto:info@dennis-carpenter.com)  
[www.dennis-carpenter.com](http://www.dennis-carpenter.com)

# 1948-1952 Ford Pickup Truck Headliner Kits

#7C-8151968-BR, #7C-8151968-BL, #7C-8151968-BL, #7C-8151968-RD, & 7C-8151968-GR

Kit includes 9 pieces, installation hardware package, installation instruction sheet

