


TYPICAL HOLE LAYOUT FOR FLOORBOARD

Installation and Rosette Welds

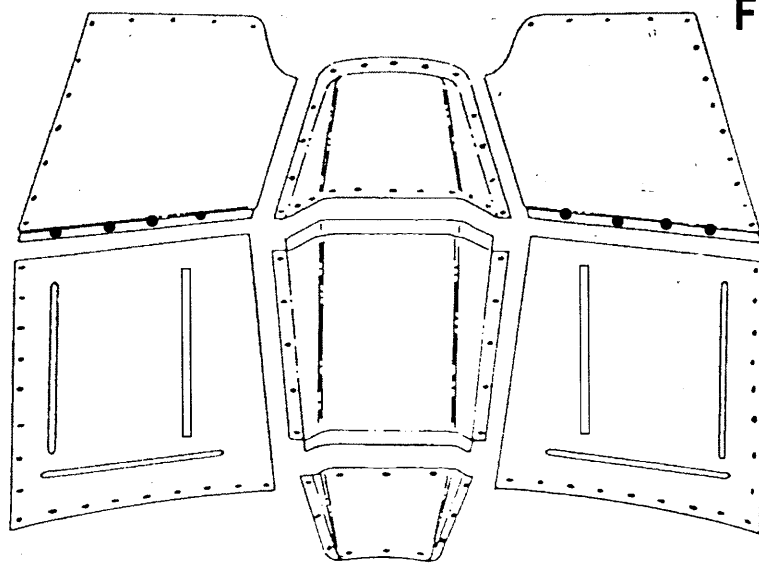


FRONT

Drill 5/16" holes and use the self-taping screws to hold the floorboard in place, before you do any welding. This will allow you to remove any part that may need to be trimmed, notched or cut for the shifter and emergency brake lever.

(THE ILLUSTRATIONS ABOVE AND BELOW MAY OR MAY NOT REPRESENT YOUR PARTICULAR FLOORBOARD, BUT INSTALLATION IS SIMILAR FOR ALL APPLICATIONS.)

Once you have your floor trimmed and fit, put one screw in every second or third hole, weld thru remaining holes. Remove screws and finish welding until all the holes are welded. This is all the welding that is needed.

DO NOT OVERWELD,
THIS MAY CAUSE
UNNECESSARY WARPAGE.

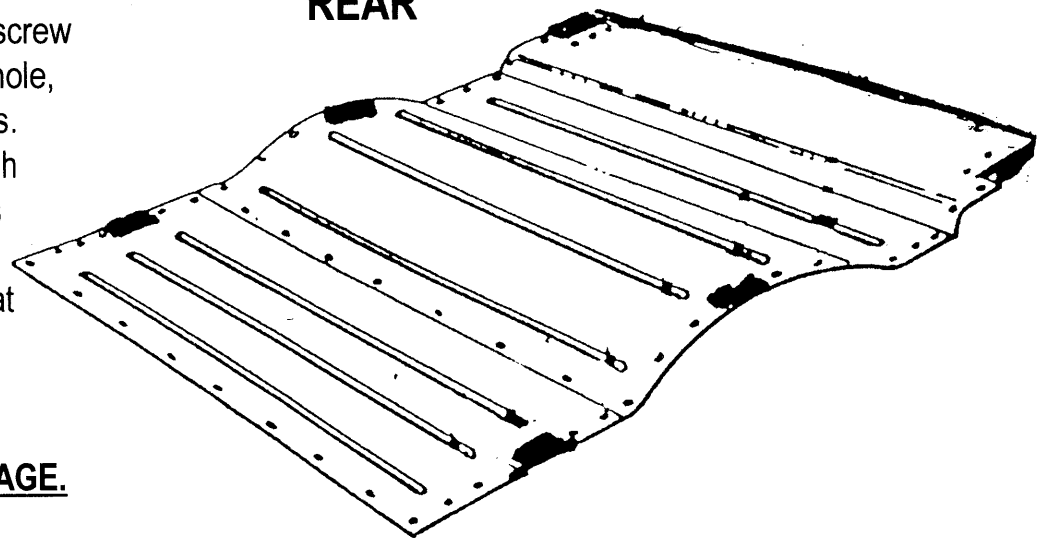

REAR