


# POWER WINDOW INSTALL KIT

PART NUMBERS  
**INST-1737**

**#@\$!\*@#\$\$% INSTRUCTIONS**  
MID FIFTY F-100 PARTS 1-800-252-1956


PAGE NUMBER  
1 OF 1

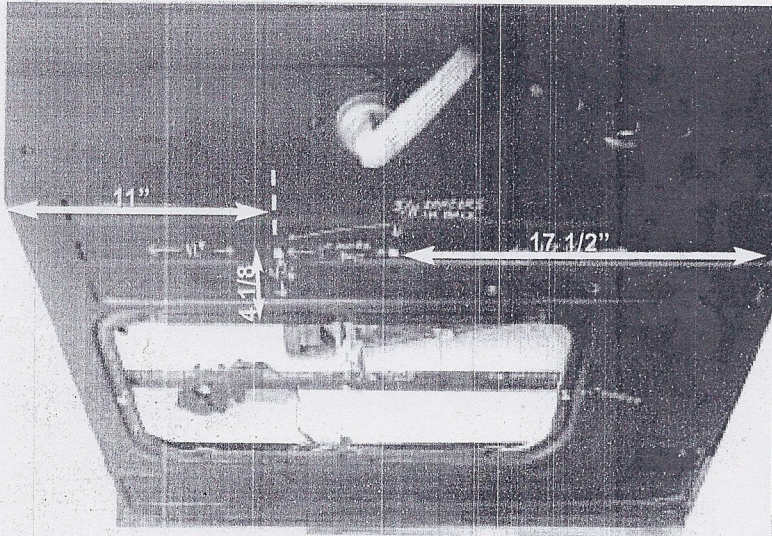


Find Center indentation in door, Drill 1/4" hole 11" from back of door, centered in indentation. Use bracket to locate the next hole, it will be approximately 17 1/2 inches from front of door.

Now is a good time to insulate door skin. Do not use jute inside door as it collects moisture, good choice is our #2166


Cut 1/2 inch off top of power window vertical bar. Cover end with tape in case it hits inside of door to prevent rattle.

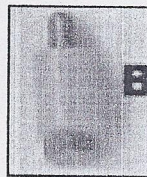

Install both (B) metric bolts with the 5/8" spacers into threaded support

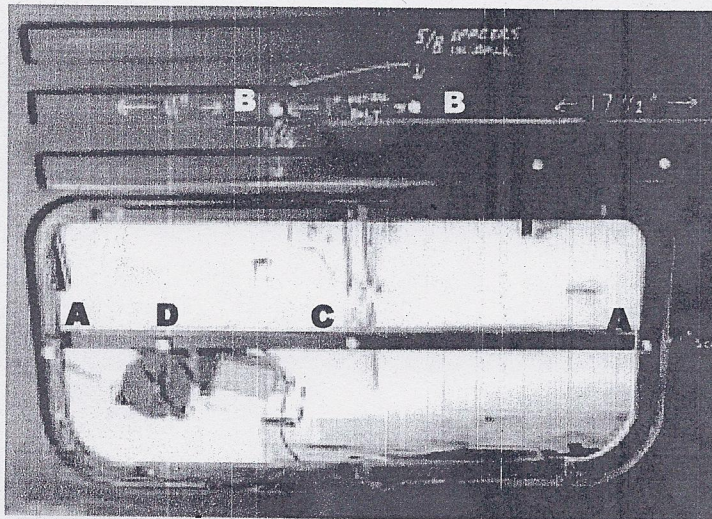


Install power window vertical lift to center of our bar with (C) bolt & 5/8" spacer into threaded tab.

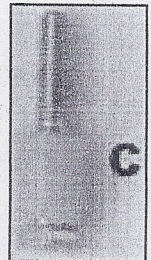


Mount motor to bar. (D)



Mount bar into door with 3/8" spacers and self tapping screws. (A)

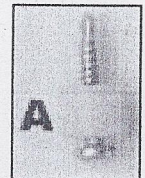

Broken 2 x 4 optional.

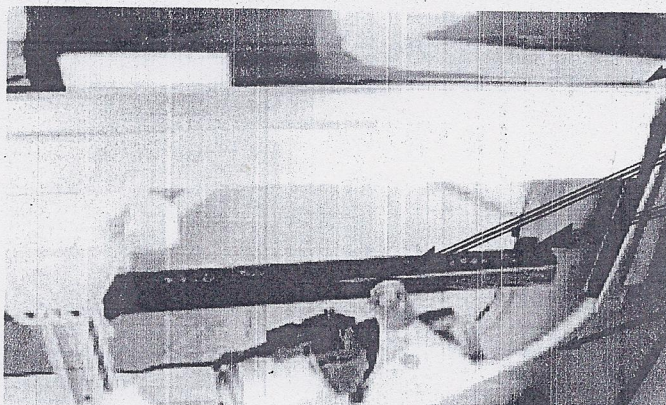

Note: make sure to cut lower glass run back a half inch from edge of glass to miss division bar.

Motor hangs on bar with one bolt.

Mount bar into door with 3/8" spacers.

Position and protect tail so it will not rattle.

Note: this view is from the outside, we do not suggest cutting a big gapping hole in the door skin even though it does seem very tempting when trying to install anything inside these doors.