


C-459A

COURTESY LAMP INSTALLATION INSTRUCTIONS

Passenger Cars

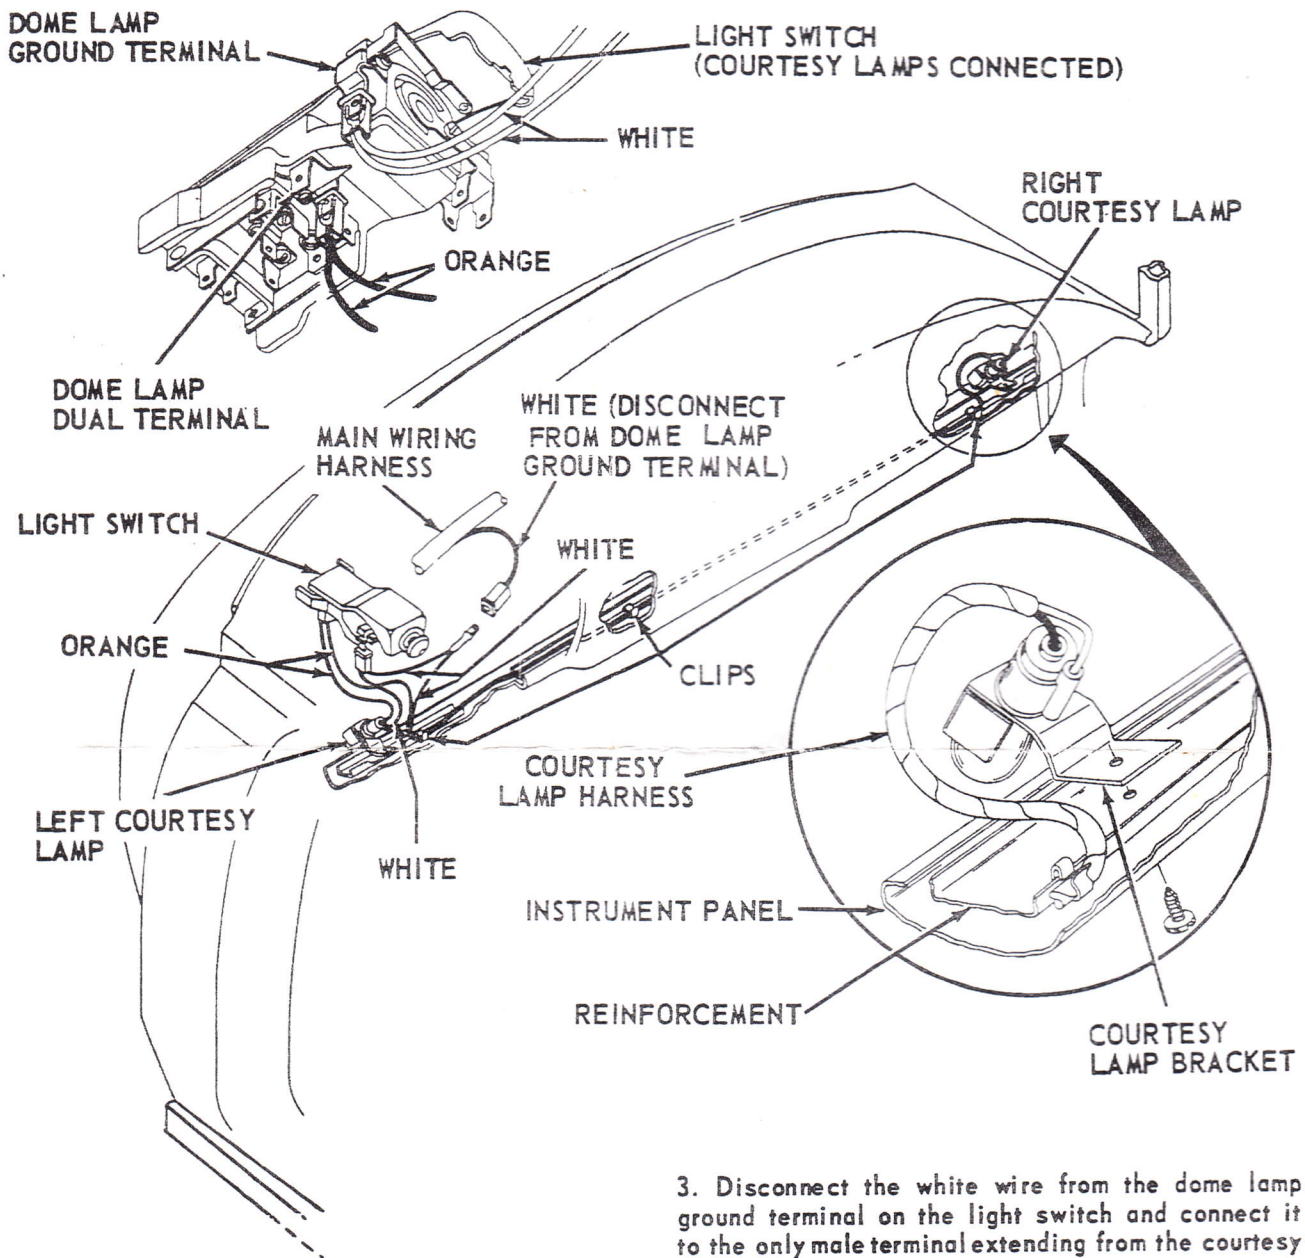

1. Mount the courtesy lamp brackets inside the instrument panel lower ledge as shown, using the existing right and left outermost holes in the instrument panel. Attach securely with the tapping screws provided.

2. Locate and install the clips on the instrument panel reinforcement as illustrated and route the wire through the clips.

3. Disconnect the white wire from the dome lamp ground terminal on the light switch and connect it to the only male terminal extending from the courtesy lamp harness.

4. One of the two female connectors from the courtesy lamp harness holds two white wires. Attach this connector to the light switch terminal from which the white ground wire was removed.

5. Attach the remaining orange wire connector to the unused blade of the dual dome lamp terminal on the light switch.

PART NO. 3713734