


TONNEAU COVER - VELCRO KIT

WITH HELPER HOLDING THE OTHER SIDE, TEST FIT THE TONNEAU TO GET AN IDEA OF THE FASTENING POINTS. THOROUGHLY CLEAN ALL SURFACES WHICH ARE TO RECEIVE THE PEEL & STICK VELCRO. DO NOT USE ANY CLEANER WHICH WILL LEAVE A RESIDUE, ALCOHOL WORKS WELL. APPLY VELCRO SOLIDLY TO METAL (AS SHOWN), ESPECIALLY AT ENDS. TONNEAU CAN BE TEST FITTED NOW, BUT AFTER TEST, RE-PRESS VELCRO TO METAL & LEAVE TONNEAU OFF FOR 3 DAYS TO ALLOW ADHESIVE TO FULLY CURE.

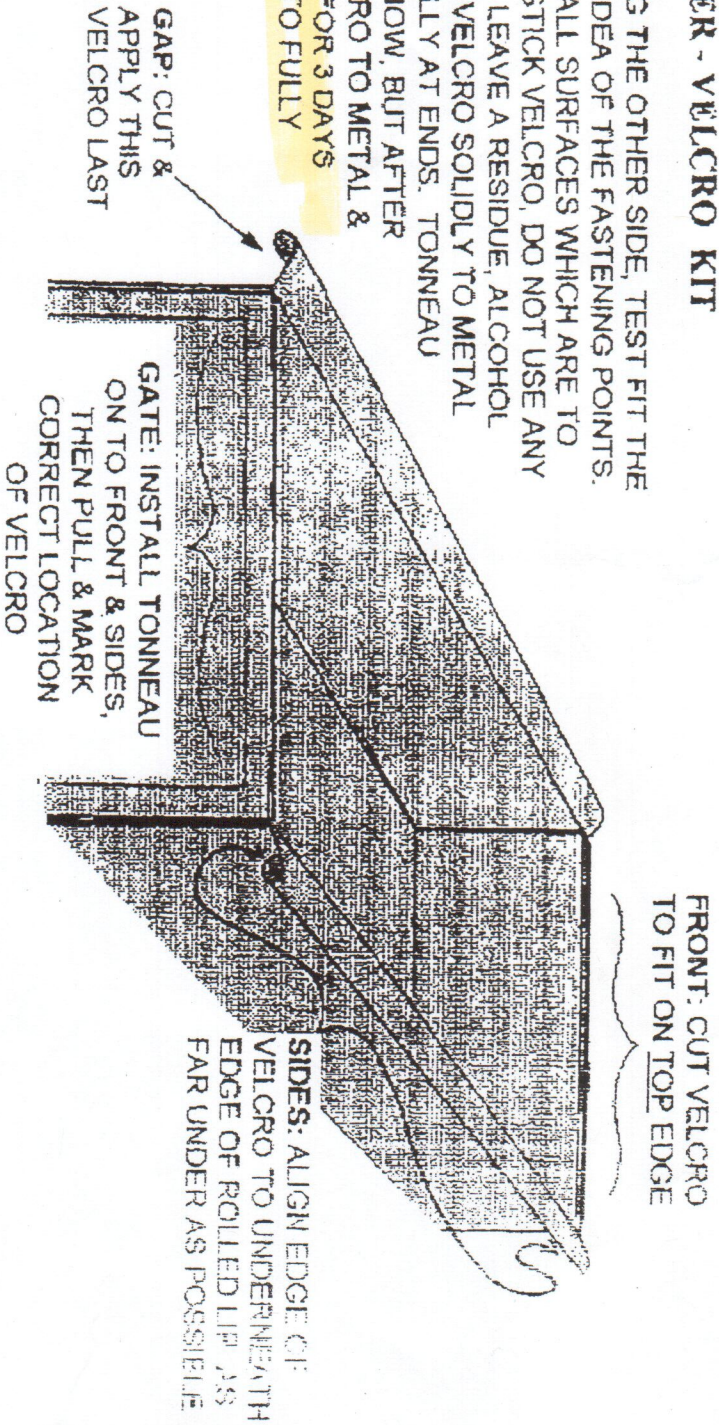

0146
0153