




TAILGATE CABLE & LATCH MOUNTING

#@\$!*@#\$\$% INSTRUCTIONS
MID FIFTY F-100 PARTS 1-800-252-1956


PART NUMBERS
INST-0262
0263, 0263-G
0263-TOOL
0264
PAGE NUMBERS
1 OF 1

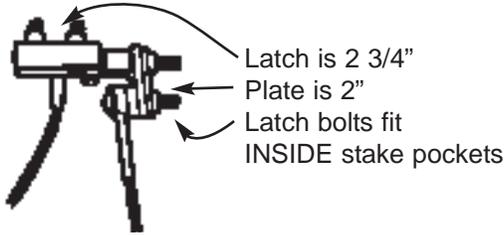

Cable is 22"

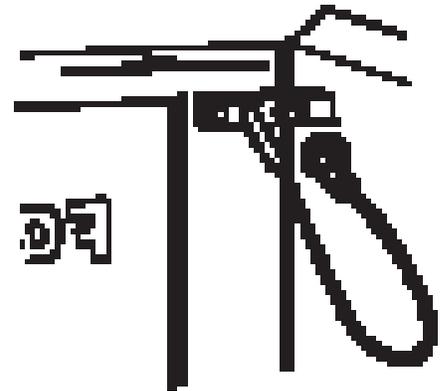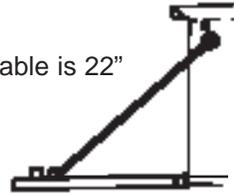

latch assembly not exactly as drawn.

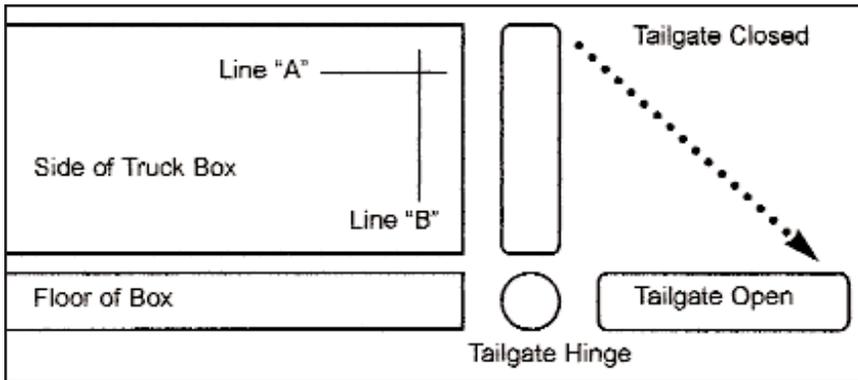


- 1...With tailgate down, measure from floor up inside of bed side 15 3/4", (**line A**) Mark point.
- 2...Close gate, make line showing the closed position of your gate, bisecting Line A (should be 1/2" from the inner wall of gate (**line B**))
- 3...Hold striker in place and put latch in the striker. Mark 2 holes on tailgate through latch.
- 4...Lower gate and make sure gate is horizontal with bed.
- 5...DOUBLE CHECK, make sure gate will close, and stay horizontal with bed when open

DO NOT DRILL HOLES UNTIL YOU ARE CONFIDENT ALL MARKINGS ARE CORRECT.

Glue on style: be sure to follow the instructions on the epoxy label for proper application.

Bolt on style: follow instructions below

- 6...If stake pockets have holes in the top of bedsides like original you can use regular nuts on latch bolts.
If so use a 1/4" drill bit for the holes.
If stake pockets are closed off, or if you prefer using nutserts see step 7.

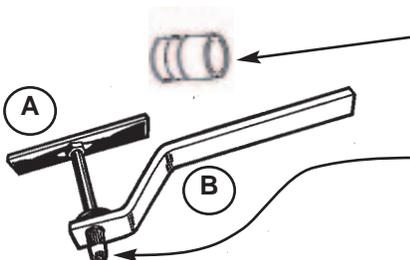

7...TO USE NUTSERTS:

Drill 3/8" holes.

Install nutserts using the nutsert tool #0263-TOOL,

One nutsert is already assembled on tool, insert into hole and tighten with tool holding arm (A) and turning handle (B)

Nutsert will smash, holding threaded part inside post