


Doing electrical work but you just aren't quite sure of yourself? Pick up a copy of our Basic Auto Electricity Book. This fact filled book walks you through electricity from the basics to a complete automotive circuit diagram. And at just \$7.95, it's better than aspirin at solving electrical headaches!

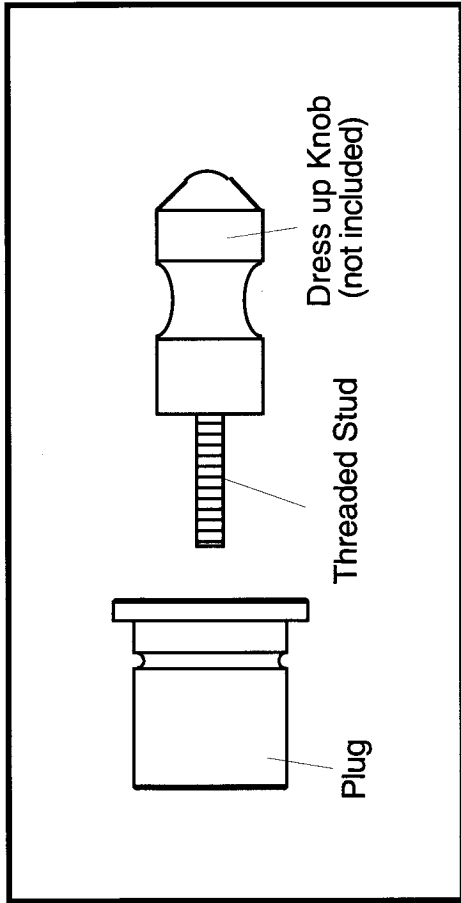

Billet Plug For Electrical Power Ports- Accepts 10-32 Threaded Dress Up Knobs (not included)

Add an attractive touch to an Electrical Power Port. This machined billet aluminum port plug and 10-32 threaded stud allow you to attach a dress up knob to match or compliment your interior. Machined billet plug w/o-ring, 10-32 threaded stud and spare o-ring.

Manufactured by Watson's StreetWorks Rod & Custom Products

Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car. *Please read and understand all installation instructions before beginning.* Planning and preparation will make the entire process easy and quick. **DISCONNECT POWER AT THE BATTERY BEFORE DOING ANY WIRING!**

1. To install a dress up knob of your choice (not included), thread the 10-32 stud into the knob snugly. Set screw or thread lock are optional. Next, screw the threaded stud/knob assembly into the Billet Plug and tighten securely by hand.
2. Initially, **DO NOT** install an o-ring. Test fit the Plug without an o-ring. Different power ports made by different manufacturers will be slightly different in size. Ideally, the plug will go into the power port with enough resistance so that it will not rattle or vibrate out.

If the plug is too loose in your power port, install one of the o-rings (the second is a spare) onto the Plug and firmly seat it into the groove with your fingers. A small amount of oil/lubricant may be needed. If this is too tight, be patient. Remember that the o-ring will take a little time to set and wear.

Watson's StreetWorks has an extensive line of street rod and custom car and truck parts with one of the largest selections of billet interior trim and electrical accessories. Check us out on the web at www.watsons-streetworks.com.

Thank you for buying our products !



Watson's StreetWorks

 PO Box 270, Bozrah, CT 06334

860.859.0513

www.watsons-streetworks.com

This entire document © StreetWorks LLC, 2009