


DOOR LOCK INSTALLATION TEMPLATE
1953-56

PART NUMBER
ALL 1130
ALL 1131
1133
PAGE NUMBER
1 OF 1


#@\$%@\$!#\$% INSTRUCTIONS
MID FIFTY F-100 PARTS 800-252-1956

Last Rev: 08/17/2022

RIGHT DOOR - Place at door handle

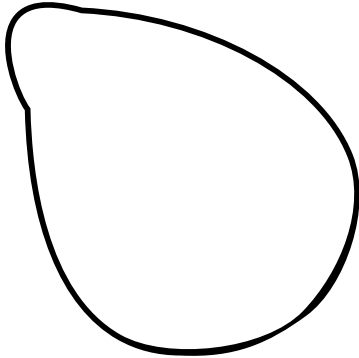

LEFT DOOR - Place at door handle


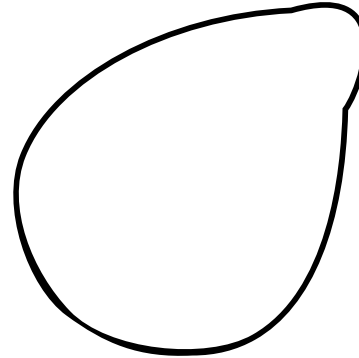


PAPER REPRODUCTIONS ARE NOT ALWAYS ACCURATE
CHECK TEMPLATE WITH EXISTING LOCK LOCATION

BEFORE CUTTING

ALIGN DOTTED LINE WITH DOOR EDGE

ALIGN DOTTED LINE WITH DOOR EDGE

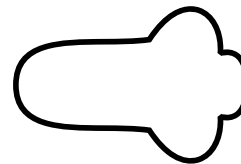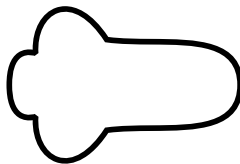

1. Cut templates out along dotted lines. CHECK TEMPLATE AGAINST EXISTING DOOR LOCKS
2. Place carbon/tracing paper behind the template facing the door.
3. Place template according to directions: Top hole at door handle, side line at door edge.
4. Draw hole outline. Be accurate. Double check before cutting door.
5. Cut and install lock.

NOTE: Lock retainer is located directly behind the lock hole, under the weather strip. Assemble the lock, spring, and lever carefully by compressing the spring and sliding the lever into the slot on the back of the lock. Lock retainer can also be installed from inside.