


Hood Bird Installation Guide

Prepare the hood and Template

Step 1: Remove the front F100 hood emblem from the hood. This will ensure proper measurement.

Step 2: Roll out and cut 24" length of wide painter's tape on a clean smooth surface. Using a Sharpie, draw a line across the tape near one end. (See Image 1 and 2 Right)

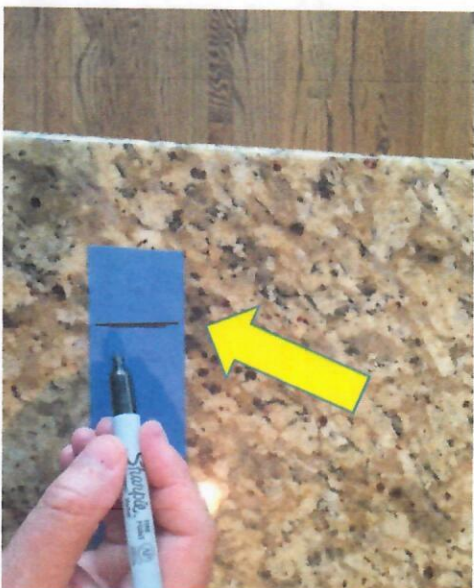

Step 3: Use a tape measure. Starting from the line drawn on the tape, measure and place a single DOT 16 1/2 inches from the line. This DOT represents placement of the FRONT hole for the Hood Bird. (See Image 3 RIGHT)



Antique Auto Bling LLC.

Hard to find parts... Made easy
208-890-6293

Prepare the hood and Template (cont.)

Hood Bird Installation Guide

Step 4: Use a tape measure. Starting from the line drawn on the tape, measure and place a single DOT 20 1/2 inches from the line. This DOT represents placement of the REAR hole for the Hood Bird. (See Image 4 RIGHT)

Note: If done properly, the front and rear holes for the bird will be 4 inches apart. Please note that the middle screw placement is optional and not required.

Drill the Holes and Install:

Step 5: Place the Painters Tape (template) on your hood. Position the line drawn on the end of the tape with the very front lip or edge of the hood. Center the tape on the hood and slowly press the tape against the hood surface upward along the Hood's ridge line. Make sure full contact is achieved all the way up. (See Image right)

Step 6: Make sure that the DOTs for the front and rear holes are perfectly aligned on the center of the hood's ridge line. Use a standard punch and tap the placement of the holes. (See 2nd Image Right)

Using a 17/64 bit, carefully drill the holes for your hood bird. The bird will require the following hardware for installation:

- 2- (1/4" - 20 course thread) 1" Long bolts
- 2- 1/4" flat washers
- 2- 1/4" lock washers

Step 7: Remove tape from your Hood. It is recommended to apply paint or primer on any bare metal surfaces and allow to dry. Bolt on the Hood Bird.

