


# 1956 STAINLESS SIDE WINDOW TRIM

PART NUMBER

# 1215

## #@%!#@%!\* INSTRUCTIONS

MID FIFTY F-100 PARTS • (800) 252-1956 • midfifty.com

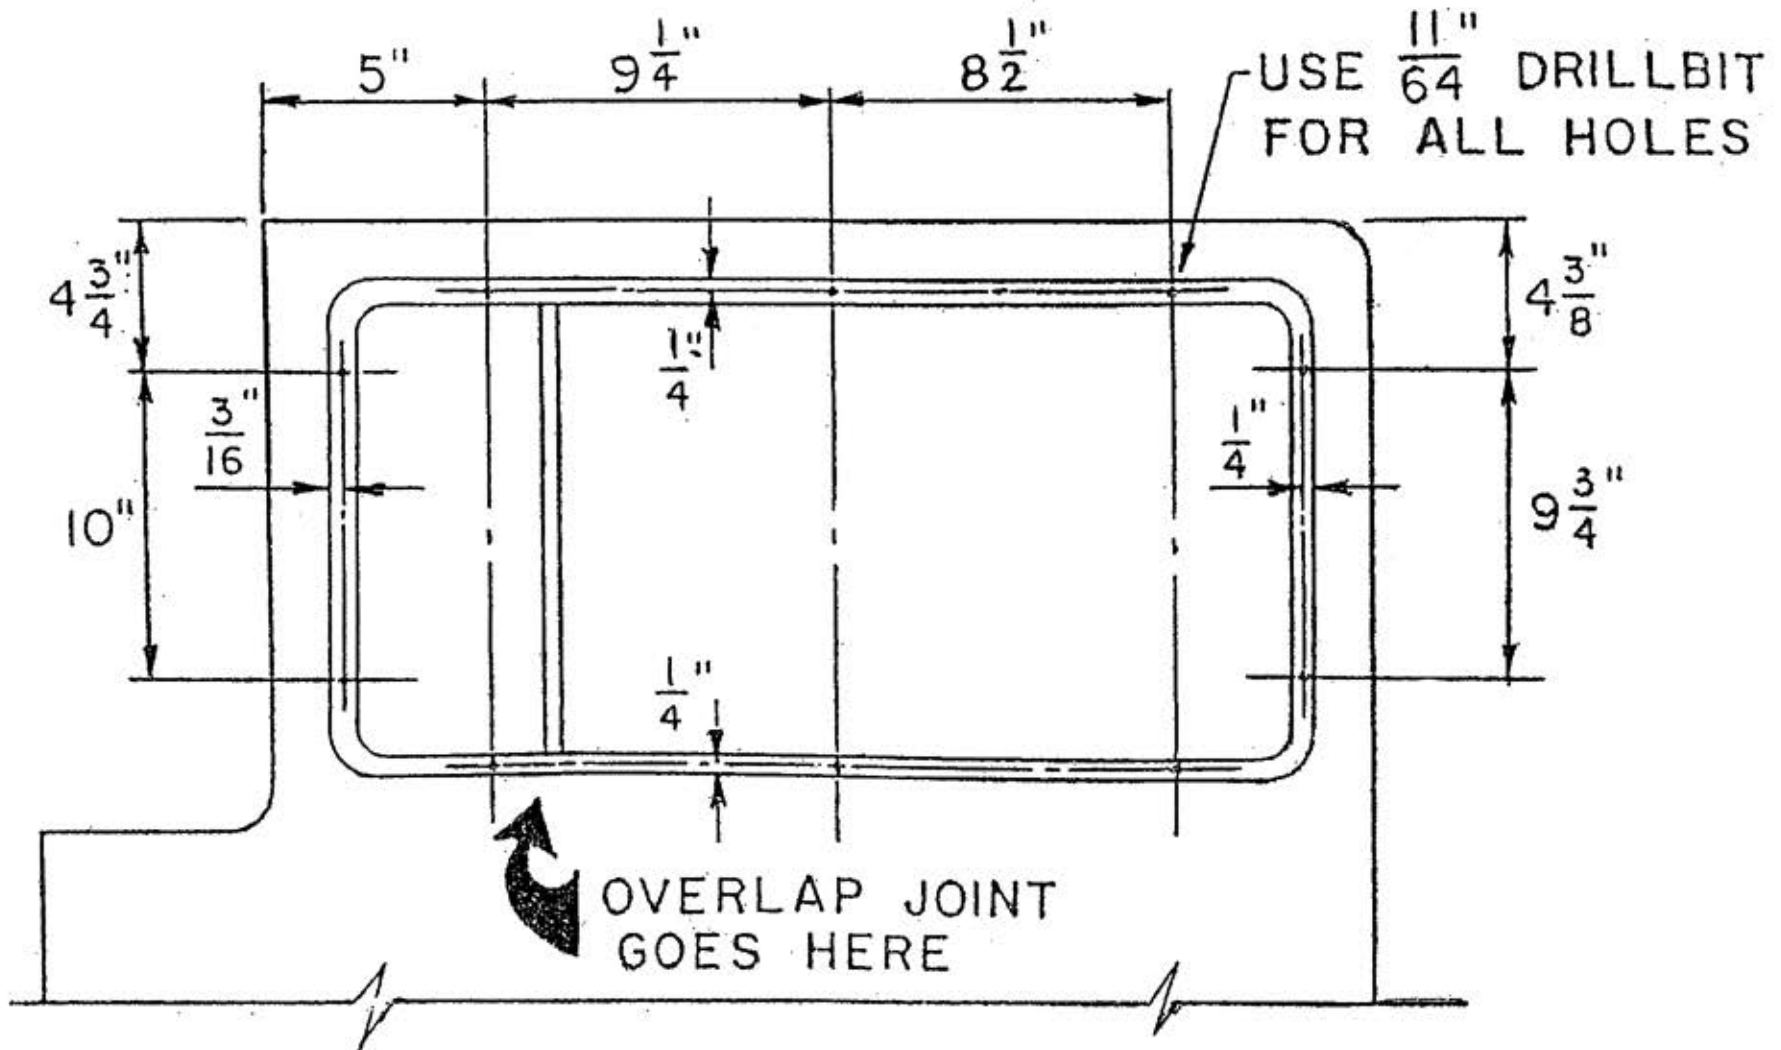

\*\*For some reason, that is unknown to us, this reproduction trim will not fit about 3% of 1956 F-100 cabs. If you have one of these unfortunate cabs, please return this trim for a refund. Do not force or twist it, as this could damage the trim and render it inelligible for refund.