



## Cool Cap

You Will Need


1 Piece of 1  $\frac{1}{2}$ " Fuel Hose

Approx 2" long

1 Piece of 1  $\frac{7}{8}$ " Fuel Hose

Approx 3  $\frac{1}{2}$ " long

2 Large Hose Clamps

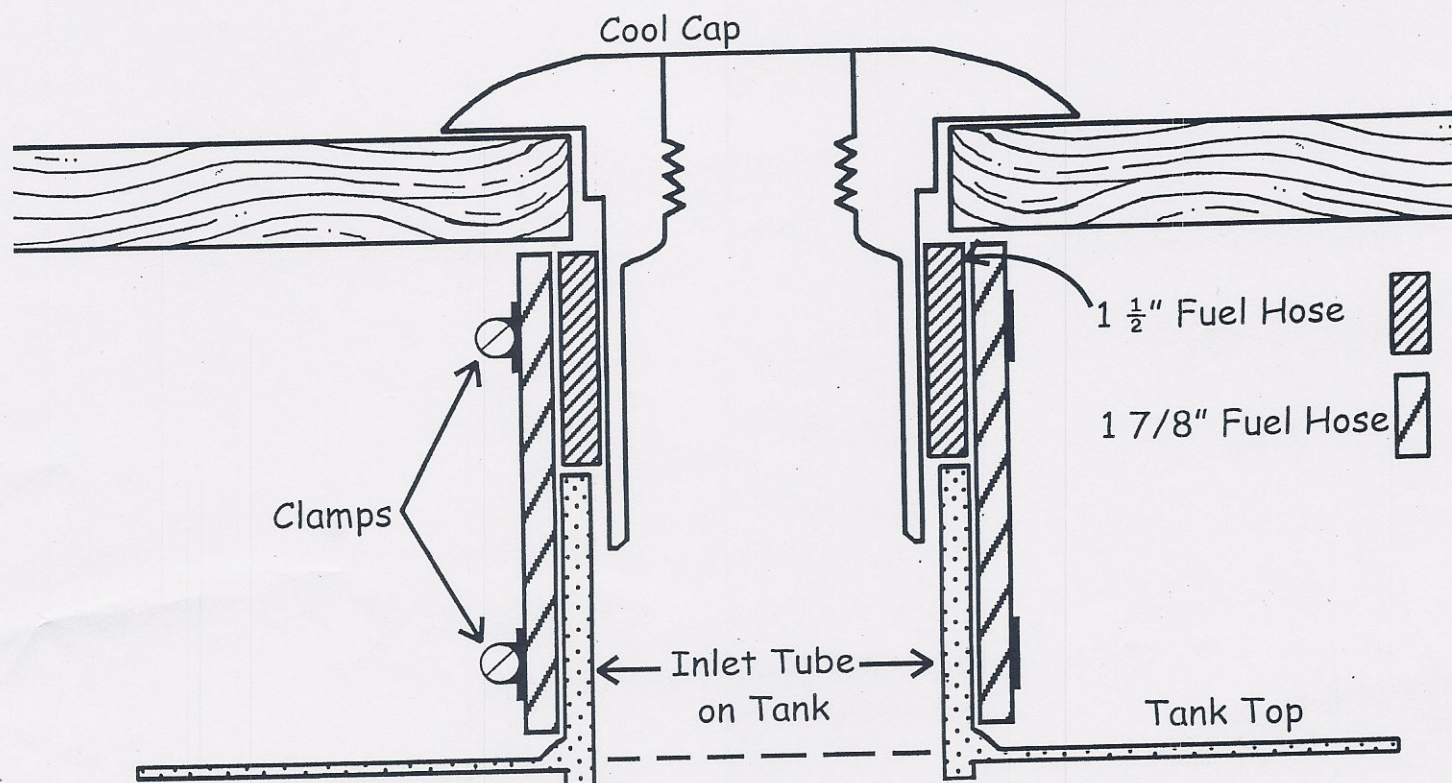

The 1  $\frac{1}{2}$ " hose will fit on the Cool Cap and fill the gap.  
Cut the 1  $\frac{7}{8}$ " hose to fit from the tank up to the  
bottom of the wood.



**1645-K**

GAS FILL PORT HOSE  
KIT