

#@\$!*@#\$\$% INSTRUCTIONS
 MID FIFTY F-100 PARTS
 1-800-252-1956

PART NUMBER
1735
 PAGE NUMBER
3 of 3




Cut away view from front.
 Sure makes it easier to put these in
 but looks like a lot of body work
 to get the door skin back on.

Glass lift, cut back half inch
 away from channel.

Front bracket and channel run



View from inside truck.
 These 2 bolts hold the window track upright.

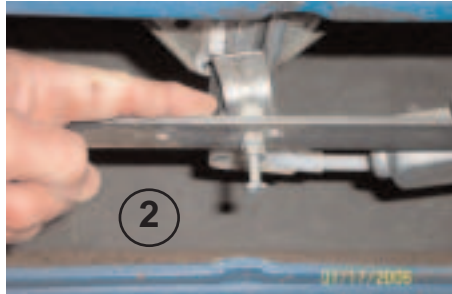

1, 2, 3, 4 spacer placement.

Use spacers to correctly align the assembly within the door.

Space cross bar, motor and upright so the glass rides straight up and down

Placement of lower felts,

Flatten and tuck ends behind upper and back channels

Tuck cable run behind channel,
 Secure housing if necessary.

