


**COMPATIBLE  
FORD PICKUP**


**year 56**

**USA part # - FD56- K**

**Code FD55 0056 K**

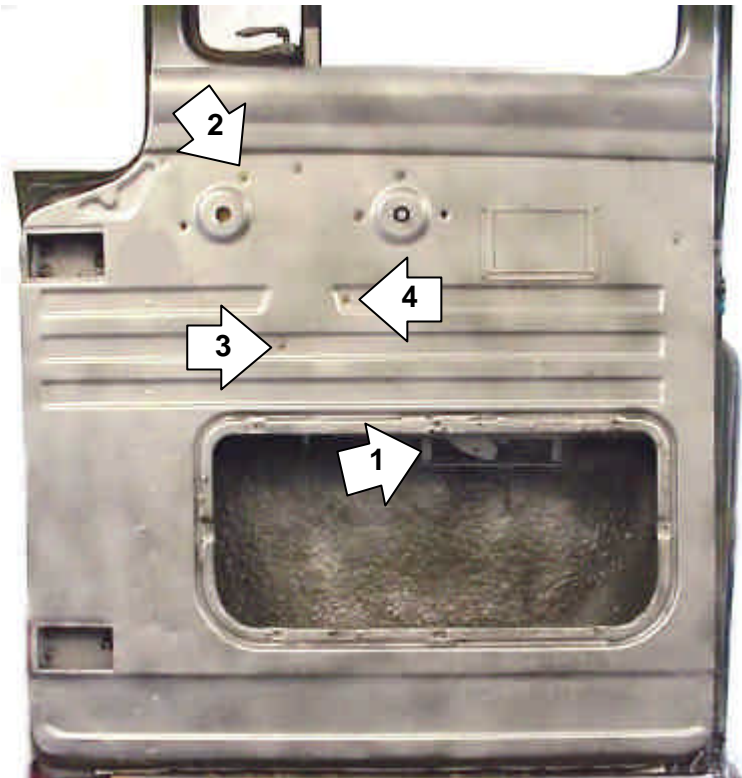

**RIGHT DOOR**

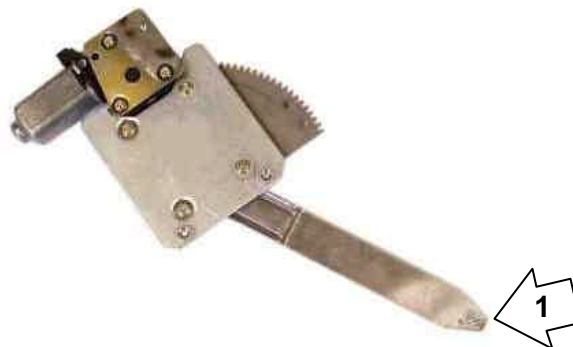

- 1) Remove door panel and manual regulator.
- 2) Fit Blue-Black power wire to motor.
- 3) Insert E/L regulator into the door, insert the slides # 1 into the channel and secure with bolts to positions as marked # 2, 3 & 4.
- 4) Fit either blanking plug or switches over manual crank hole in door panel.
- 5) NOTE: Before cutting door panel to fit the switches, you must check that you have enough clearance to accommodate switches when door panel is refitted.
- 6) Check correct window operation before refitting door panel.

**NOTE: WINDOWS SHOULD ONLY OPERATE WHEN THE IGNITION KEY IS IN THE " ON or ACC " POSITION ONLY.**