

HEADLIGHT SWITCH INSTALLATION

PART NUMBER
2901


#@\$!*@#\$\$% INSTRUCTIONS

MID FIFTY F-100 PARTS 1-800-252-1956

PAGE NUMBER
1 of 1

INSTRUCTIONS

1. 12 volt switch requires 12 volt knob with shaft and 12 volt inner screw nut #2902. Note that fuse on rear of switch is for dome light only.
2. When using AMP Gauge, (Not AMP Light) loop the large 14 gauge yellow wire through back of AMP gauge then on to Light Switch, Post "B". **NOTE: Do not strip wire, leave intact.**
3. Yellow wire must be connected for anything to work! All power goes through this switch which contains circuit breakers. This switch is the "fuse block" for the entire truck.

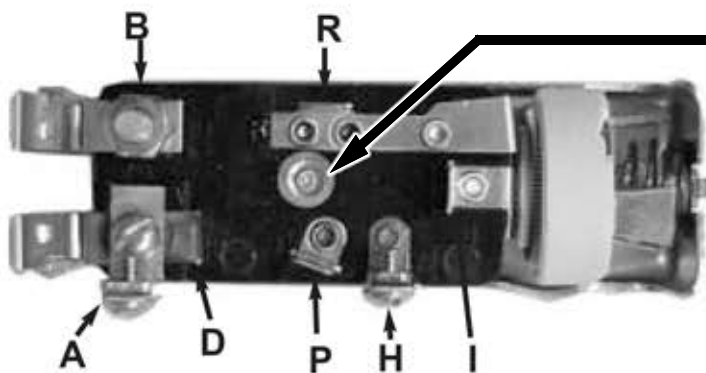

To release the shaft, push it as far into the switch as it will go then press and hold this button, and pull back on the shaft.



POST	FROM	WIRE COLOR
B	Battery AMP Gauge	Yellow (All)
A	Stop Light	Red
P	Park Lights	Black with Yellow Stripe
R	Rear Lights	Brown
H	Dimmer Switch	Red with Yellow Stripe
I	Dash Lights	Blue with Red Stripe
D	Dome Light	Black w Blue Stripe

NOTE: Hole in dash may need enlarged for some 53 - 55's