


UPPER & BACK CHANNEL PATTERN

PART NUMBER
INST-3107-ID

Page 1 of 1

PATTERN

MID FIFTY F-100 PARTS 1-800-252-1956

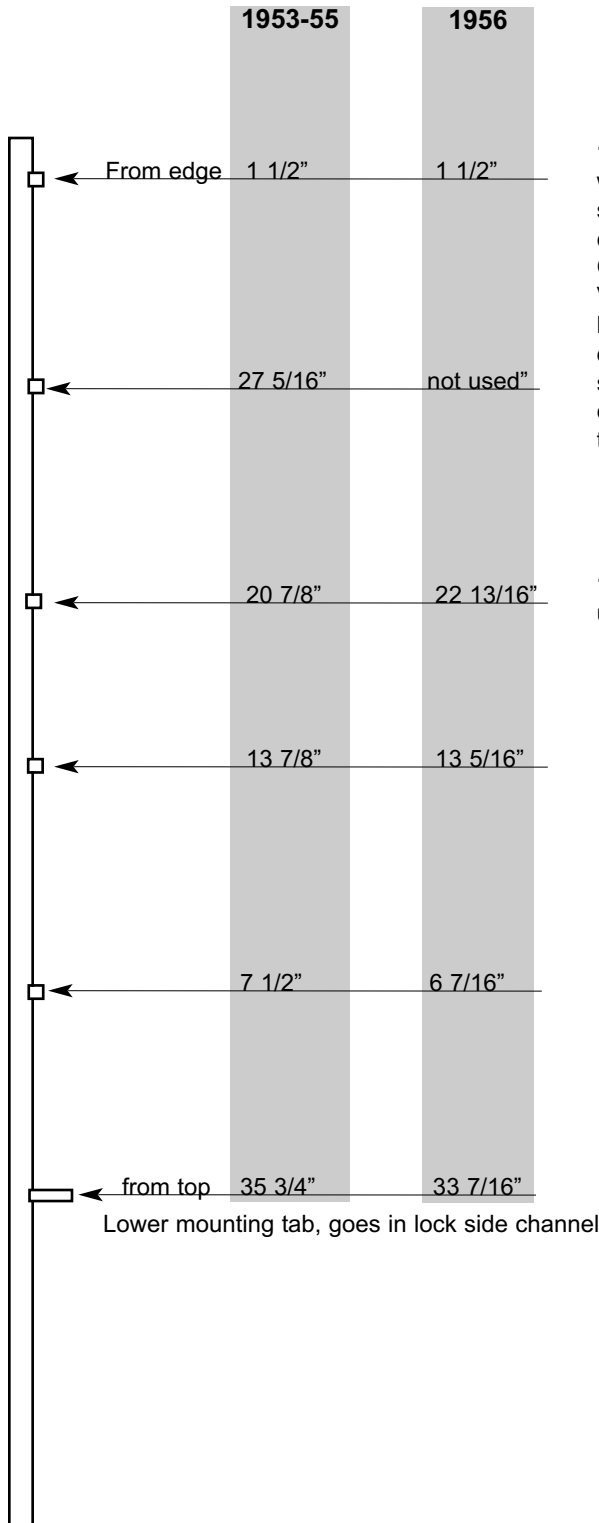

1953-55 Corner originally had a metal "L" bracket which was stapled to the channel. Inside this L the channel was split, allowing the 1953-55 glass to go past or through the channel.

Carpenter still uses this assembly.

Vintage and Dales do not, using instead a larger angled base clip to round the corner. Original glass may want to drive the corner up into the door. Our glass has a tiny sliver shaved off the corner to avoid this. We made this change in the pattern in the early 80's and it has been that way since without incident.

1956 Channels have always been straight with the end user making the bend, even when supplied by Ford.