


Instructions: BED STRIP SIDE FLANGE COVER, NO ANGLE
MID FIFTY F-100 PARTS 1-800-252-1956

PART NUMBER
90207

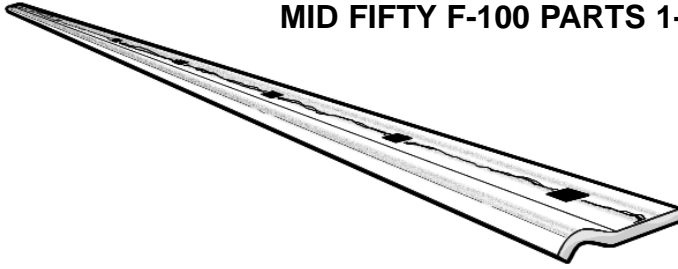

This cover piece does not have an angle. To keep it snug against the flange the last hole will need to be drilled through the bed side flange and bed wood.

There are 3 holes close together toward the tailgate end. The “off” hole is a stock hole in the bedside flange and is where the rear fender brace bolt goes. Flange covers without the angle have a hole at the tailgate end which must be drilled in the bed flange, because these do not go to the end of the side, they are not intended to go over or under the end cap.

Note that bedsides have been produced by half a dozen companies over the years as well as 2 versions from Ford. The flange hole pattern varies a litter in some bedsides. You may have to open up a bedside hole to match these flanges, the most is about a quarter inch. Most of the time we find the variations to be in the fender brace hole and then next one back. And of course the last hole needs drilled through your bedside flange and wood.