STOCK FRONT BED PANEL THREADED INSERT INSTALLATION	INST-0200 PART#: 0200 PAGE: 1 OF 1
MID FIFTY #@!$%#@!$% INSTRUCTIONS 800-252-1956 MIDFIFTY.COM	
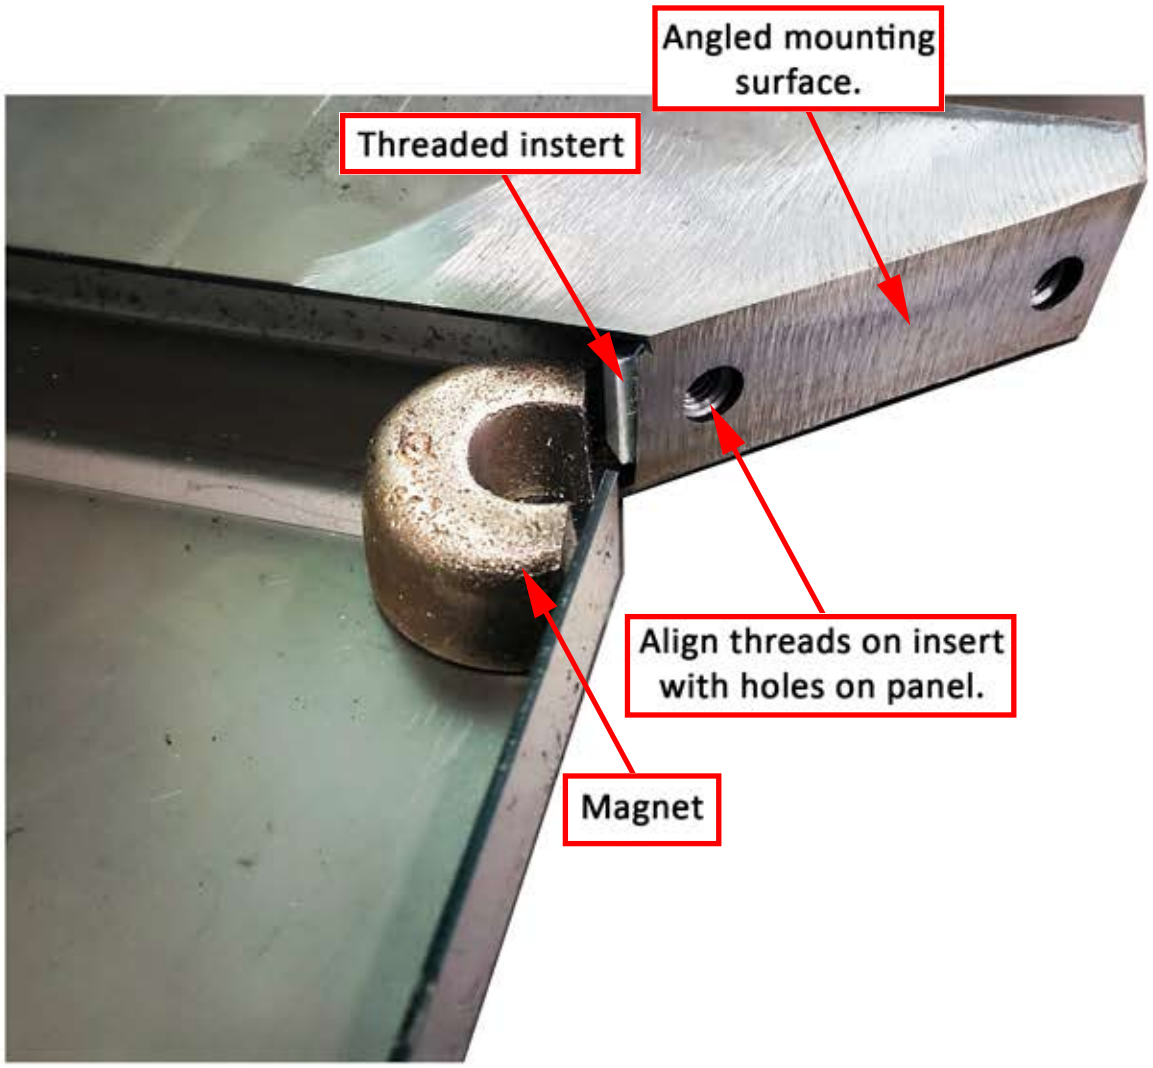
If the holes on the front bed panel you have received are not threaded you must weld in the theaded instert BEHIND mounting hole plate on the angled surface on the panel. Using a strong magnet will aid in holding the mounting place in place to do so.
See below image.