TRIM TO FIT MOTOR MOUNTS

#@$&*%! INSTRUCTIONS

MID FIFTY F-100 PARTS 1-800-252-1956

PART NUMBERS
4462
4464
PAGE NUMBER
1

Motor mount.. 4462 includes 2 square tubes with bolt tubes attached

Motor mount 4464 includes

1 square tube with bolt tube attached
1 large piece
1 small piece
1 straight piece

When assembled it will look something like this:

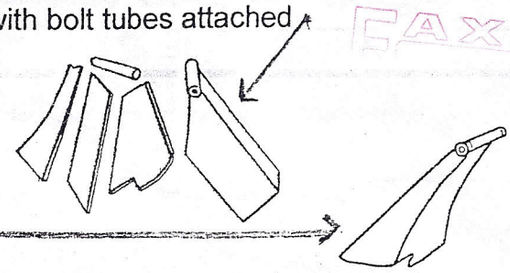

Bolt tube is extra long for added adjustability, trim to fit between ears of motor mount pads.
Use grade 8 bolts or better to bolt pad to tube. Our 84410, 84419, 84419, 84422 bolt kits.
Chevy engines typical bolt tube length 2 5/8", Ford engines typical bolt tube length 3 5/8"

1..In the case where the motor and trans are going to be offset 1 inch to the passenger side, bolt the trans to the offset trans-mount and set the cross member on top of the frame rails.

2.. Position motor where you want it, keeping carb. base level, and watching oil pan clearance.

3.. Fit the passenger side mount first, and tack weld into place

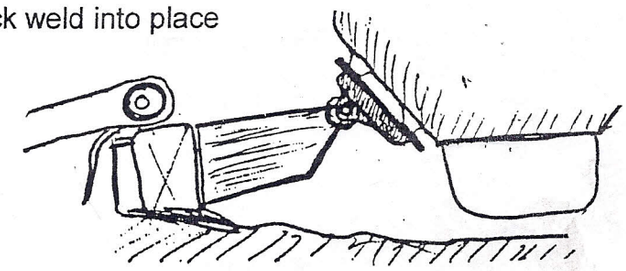

4.. Fit drivers side mounts.

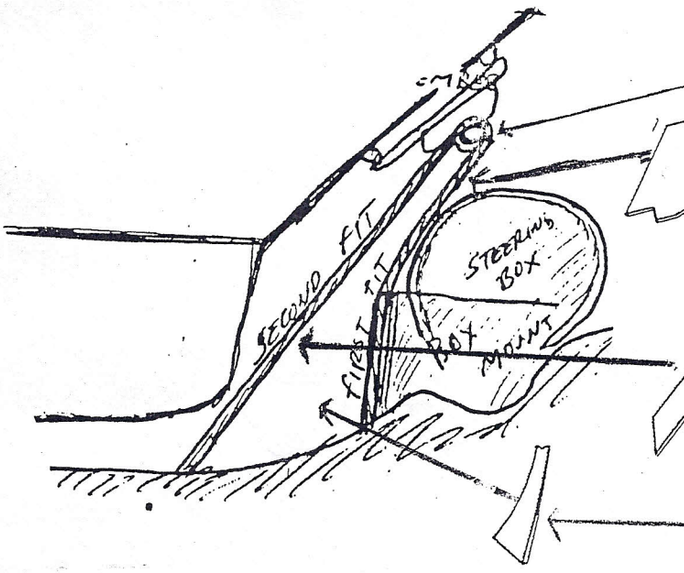

**Trim the bolt tube to fit between motor mount pad ears. Slip bolt into place.

1** Fit the outside plate, the largest piece, the bottom shape fits the Volare cross member, some minor trimming may be necessary, bend to fit around steering box and to the outside of the bolt tube.

2** Fit the straight piece with angled ends to inside of bolt tube.

3** Fit the front face and tack weld

5.. Remove motor, weld all points for strength and finish as desired.